



Electro-Pneumatic Positioner TZIDC-220 for FOUNDATION Fieldbus with flameproof enclosure

Operating Instructions

Document No.: 42/18-82 EN
Issued: 10.2006
Revision: C

Manufacturer

ABB Automation Products GmbH
Schillerstr. 72
32425 Minden
Germany
Tel: +49 551 905-534
Fax: +49 551 905-555
CCC-support.deapr@de.abb.com

Note

More information, e.g. regarding configuration, operation and ordering details, is available on CD.

© Copyright 2006 by ABB Automation Products GmbH
Modifications reserved

This document is subject to copyright. It is intended to help the user operate the equipment safely and efficiently. The content may not be copied or reproduced either in part or in full without the prior consent of the copyright owner.

Important information	5
1 Safety summary	6
1.1 General safety instructions	6
1.2 Device-specific safety instructions	7
1.2.1 General.....	7
1.2.2 Special instructions for TZIDC-220 positioners of explosion protection type Ex d (type Doc. 901132, type examination certificate DTM 02 ATEX E 029 X).....	7
1.2.3 Pneumatic safety.....	8
1.2.4 Electrical safety.....	8
1.3 Explosion protection	9
1.4 Correct use	10
1.5 Qualified personnel	10
2 Manufacturer's information	10
2.1 Delivery	10
2.2 CE compliance information	10
3 Installing and commissioning	11
3.1 Mechanical mounting	11
3.1.1 General.....	11
3.1.2 Operating conditions at the installation site.....	12
3.1.3 Mounting the positioner to linear actuators.....	12
3.1.4 Mounting the positioner to rotary actuators.....	17
3.2 Pneumatic connection	20
3.2.1 Safety instructions.....	20
3.2.2 Making the pneumatic connections.....	20
3.3 Electrical connection	21
3.3.1 Safety instructions.....	21
3.3.2 General installation instructions.....	21

3.3.3	Overview.....	22
3.3.4	Making the electrical connections.....	23
3.4	Setting jumpers on the motherboard.....	25
3.5	Commissioning.....	26
3.5.1	Procedure.....	26
3.5.2	Requesting bus information.....	28
3.5.3	Local operation (bus device).....	29
3.5.4	Parameter setting example.....	30
3.6	Functional test / maintenance.....	31
3.6.1	Functional test of the shutdown module.....	32
4	Technical data.....	33
4.1	Fieldbus specifications.....	33
4.2	Basic model.....	34
4.3	Options.....	38
5	Certificates.....	40
Appendix A: Configuration overview.....		68

Important information

Symbols

In order that you can make the best use of this document and to ensure safety during commissioning, operation and maintenance of the equipment, please note the following explanation of the symbols used:

Symbol	Signal Word	Definitions
	DANGER	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. (High level of risk.)
	WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. (Medium level of risk.)
	CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. (Low level of risk.)
	NOTICE	NOTICE indicates a potentially harmful situation which, if not avoided, may result in damage of the product itself or of adjacent objects. (Damage to property)
	IMPORTANT	IMPORTANT indicates useful hints or other special information which, if not observed, could lead to a decline in operating convenience or affect the functionality. (Does not indicate a dangerous or harmful situation.)

As well as the instructions in this document, you must also follow the generally applicable accident prevention and safety regulations.

If the information in this document is insufficient in any situation, please contact our service department, who will be happy to help you.

Please read this document carefully before installation and commissioning.

1 Safety summary

1.1 General safety instructions

This chapter provides important instructions for your safety. Thoroughly read and follow these instructions.

Proper and safe operation of the TZIDC-220 positioner requires:

- proper transportation and storage
- mounting, electrical and pneumatic installation and commissioning by qualified personnel (see chapter 1.5, page 10)
- correct operation according to the instructions in this manual
- correct use (see chapter 1.4, page 10)
- careful maintenance

The regulations, standards and directives referred to in this manual are applicable in Germany. When using the TZIDC-220 positioner outside the German jurisdiction, the relevant regulations, standards and directives applicable in the country where the device is used must be observed.

The TZIDC-220 positioner has been designed and tested in accordance with DIN VDE 0411 Part 1 / EN 61 010 Part 1

“Safety Requirements for Electronic Measuring Apparatus”

(based on IEC Publication 348) and has been delivered in a safe condition.

In order to retain the device in a safe condition and ensure safe operation, attentively read and follow the instructions given in the sections marked with the respective symbols. (See “Important information” on page 5.) Otherwise, persons can be endangered or the device itself or other devices or equipment may be damaged or fail.

The device must be shut down and secured reliably against unintentional restart if it must be assumed that safe operation is no longer ensured. Possible reasons for this assumption can be:

- visible damage of the device
- failure of the electrical function
- exposure to a storage temperature of more than 85 °C for a longer time period
- exposure to considerable strain or wear during transport

Only the manufacturer is authorized to repair the device.

1.2 Device-specific safety instructions

1.2.1 General



WARNING

- Any user-made changes or manipulations of the device are prohibited! Only the manufacturer or an expert for explosion protection are authorized to modify the device.
- Before re-using a TZIDC-220 positioner that has already been used in another installation place **always** reset the device to the factory setting. Never start the autoadjustment function before having restored the factory setting! Otherwise, hazardous situations may occur due to improper settings.
- Do not use the internal communication interface (X5) on the motherboard when the TZIDC-220 positioner is installed and used in the hazardous area.
- The (optional) safety shutdown module must be subject to a functional test every two years at the latest. Follow the instructions in chapter 3.6.1.

1.2.2 Special instructions for TZIDC-220 positioners of explosion protection type Ex d (type Doc. 901132, type examination certificate DTM 02 ATEX E 029 X)



WARNING

- Do not open a TZIDC-220 positioner installed and run in a hazardous area directly upon switch-off. **Always wait for at least five minutes.** Otherwise, some components inside the housing may still be hot and cause an explosion.
- Do not use flammable gas nor oxygen or oxygen-enriched gas as a pressure medium.
- Do not use variants which according to the certificate comply with type of protection “intrinsic safety” intrinsically safe once they have been used in type of protection “flameproof enclosure”.
- Handle the cover with care. Otherwise, the sealing surface may be damaged. This will void the explosion protection (Ex d). Place the removed cover on clean, even surfaces, only! Avoid any pollution of the sealing surface.
- Secure the cable entry against turning and loosening by using security adhesive of medium strength (see chapter 3.3.4, page 23).
- If the positioner is used at an ambient temperature above 60 °C (140 °F) or below -20 °C (-4 °F), use cable entries and cables approved for a service temperature corresponding to the maximum ambient temperature increased by 10 K or corresponding to the minimum ambient temperature, respectively.

1.2.3 Pneumatic safety



WARNING

- Observe the accident prevention rules of the Employers Liability Insurance Association.
- Observe the safety instructions for the pneumatic actuator used. The actuator's high actuating power may cause injuries!



NOTICE

- Take suitable precautions to ensure that even in case of malfunctions the positioner's max. admissible operating pressure of 6 bar (90 psi) is not exceeded. Otherwise, the positioner and/or the actuator may be damaged.
- The positioner must be supplied with instrument air exempt from oil, water and dust according to DIN/ISO 8573-1, Class 3
 - Purity: max. particle size 5 μm , max. particle density 5 mg/m^3
 - Oil content: max. concentration 1 mg/m^3
 - Pressure dew point: maximum value 10 K below operating temp.

Before connecting the air pipes blow them out to remove dust, splinters and other particles.

1.2.4 Electrical safety



WARNING

- Observe the common VDE safety regulations and the accident prevention rules of the Employers Liability Insurance Association.
- Observe the common standards and safety regulations for the installation and operation of electrical systems.
- When connecting the device, observe all electrical specifications in these operating instructions or in the data sheet.
- For the electrical installation of explosion-protected devices, observe all standards, regulations and directives governing explosion protection and applicable for the construction and use of explosion-protected systems, especially the DIN/VDE directives, the directives for explosion protection (VDE 0165 or EN 60079), and the special requirements and specifications for your devices (see the following chapter "Explosion protection" and chapter "Certificates" starting on page 40).
- Exclusively power devices with explosion protection via an electrically isolated circuit with safe extra-low voltage (SELV) in accordance with EN 60 950.



NOTICE

Power supply

- The basic device is bus-powered via the Fieldbus connected to the bus terminals +(11) and -(12). The option modules have to be supplied separately.
- When connecting a power source for test purposes without establishing a bus communication (e.g. when executing the *Autoadjust* function), a supply voltage between 9.0 V DC and a maximum of 32 V DC can be applied.



Electromagnetic interference

- Do not run bus/signal lines close to power lines. Power lines produce interference in their near vicinity which may affect the electrical capabilities of the bus/signal lines.
- In order to ensure electromagnetic compatibility (EMC), always use shielded cables conforming to the standards for the bus lines. When running the device with the option modules (proximity switches, microswitches, shutdown module) use shielded cables for these modules as well. All cable shields must be kept as short as possible and have to be connected to protective ground on both sides (use the grounding screw in the TZIDC-220 connection compartment on the device side).
- Keep the case closed. When the case is open, the positioning action may be affected through electromagnetic interference. This may result in a permanent positioning error, especially when the *Autoadjust* function is performed with the case open.

1.3 Explosion protection

One of the type plates seen below is attached to the positioner to the left of the main type plate, depending on the positioner's explosion protection. It indicates the degree of explosion protection and the certificate valid for your positioner. For details please refer to chapter "Certificates" starting on page 40.



Always observe the specifications and special requirements for your positioner stipulated in the applicable certificate.



Fig. 1 Type plate indicating the degree of explosion protection

1.4 Correct use

The TZIDC-220 positioner is an electro-pneumatic positioner with flameproof enclosure for pneumatic final control elements. It is designed for being attached to linear and rotary actuators following the instructions in this manual. The positioner may be used only for the applications listed in these operating instructions or in the data sheet 18-0.34 EN. Any other use is considered as incorrect.

The signal current circuit and the input and output circuitry must meet the explosion protection requirements stipulated in the certificates (see chapter "Certificates" starting on page 40).

The maximum permissible ambient temperature range of -40 °C to +85 °C (when using proximity switches of type SJ2-S1N (NO): -25 °C to + 85 °C) must not be exceeded.

1.5 Qualified personnel

Only those persons familiar with the installation, commissioning, operation and maintenance of the TZIDC-220 positioner or similar instruments who have the required qualification and have read and understood the operating instructions are authorized to work on the TZIDC-220 positioner. These persons must be sufficiently trained and experienced and know the relevant standards and regulations to be able to judge their assigned tasks and recognize potential hazards. Only persons who are qualified or have been trained adequately and who have the required certificates are authorized to work on explosion-protected devices.

2 Manufacturer's information

2.1 Delivery

When receiving the delivery please immediately check items and scope for intactness and completeness. The scope of delivery is stated in the shipping documents. If ordered, the accessories (e.g. mounting material, pressure gauge block, filter regulator) are added to the delivery as individual items. Check items and scope of the delivery by means of the catalog numbers to see if types and quantities are in accordance with your order. If the positioner is delivered already mounted to the actuator, the positioner, accessories and actuator or final control element are considered as a common delivery item. A list of catalog numbers and details of the different versions and accessories can be found in data sheet 18-0.34 EN.

2.2 CE compliance information

We declare that we are the manufacturer of the TZIDC-220 positioner and that the product conforms with the EMC Directive 89/336/CEE as of May 1989 and meets the requirements of the following standards:

- EN 55022:1998 "Information technology equipment, Radio disturbance characteristics, Limits and methods of measurement"
- EN 61000-6-2:8/2002 "Electromagnetic compatibility (EMC) Part 6-2: Generic standards - Immunity for industrial environments"
- EN 61000-6-3:3/2000 "Electromagnetic compatibility (EMC) Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments"

The TZIDC-220 positioner complies with the EC directive for CE conformity certification.

3 Installing and commissioning

3.1 Mechanical mounting

3.1.1 General

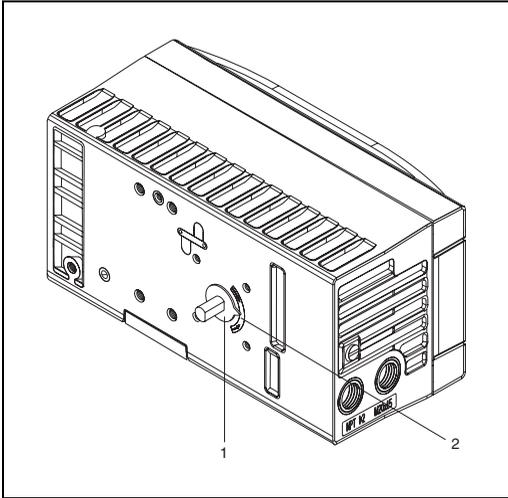


Fig. 2 Operating range

The arrow (1) on the feedback shaft (and thus the lever) must travel within the area marked with the small arrows (2).

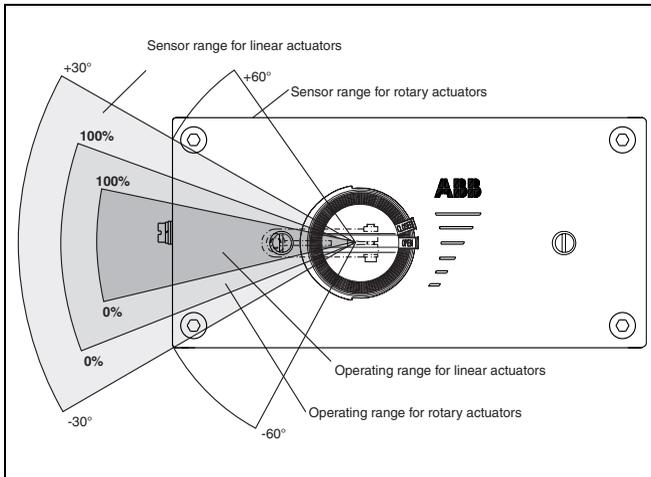


Fig. 3 Positioner ranges

When mounting the positioner, ensure that the transfer of the stroke or rotation angle for the position feedback is correct. The maximum rotation angle is 60° for mounting to linear actuators and 120° for mounting to rotary actuators. The minimum angle is always 25°.

3.1.2 Operating conditions at the installation site




WARNING

Before installing check to ensure that the specifications in terms of safety and control applicable to the TZIDC-220 positioner will not be exceeded at the installation site of the actuator or final control element.

Ambient temperature:	-40 °C ... +85 °C (-25 °C ... + 85 °C when using proximity switches of type SJ2-S1N (NO))
Relative humidity:	95 % (mean annual value), condensation permissible. Observe the specifications for protection class IP65 / NEMA 4X and the technical data in this manual.
Explosion protection:	Observe the technical data, and the specifications in the certificates (see the relevant sections of this manual).
Mounting orientation:	any orientation allowed

3.1.3 Mounting the positioner to linear actuators

A special attachment kit is available for mounting the positioner to a linear actuator according to DIN/IEC 534 (lateral mounting to NAMUR) comprising the following parts:

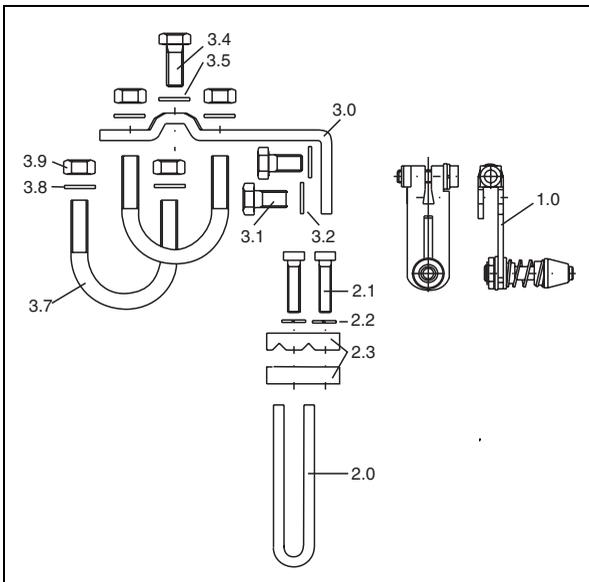


- Lever (1.0) with follower pin, for 10 ... 35 mm or for 20 ... 100 mm actuator travel
- Follower guide (2.0) with two screws (2.1), spring washers (2.2), and clamp plates (2.3)
- Angle bracket (3.0) with two screws (3.1), and two plain washers (3.2)
- Screw (3.4) and plain washer (3.5) for mounting to cast iron yoke
- Two U-bolts (3.7), each with two plain washers (3.8), and two nuts (3.9) for mounting to columnar yoke

Fig. 4 Mounting kit for linear actuators

Tools required:	Wrench 10 mm /13 mm Allen key 4 mm
-----------------	---------------------------------------

Follow the procedure (steps 1 - 5) below to attach the positioner to a linear actuator:


1. Mount the follower guide to the actuator

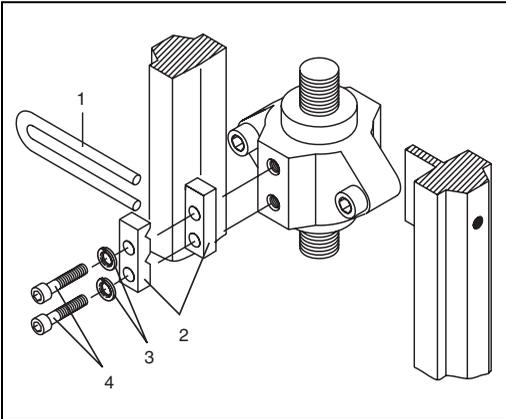

- Fasten the follower guide (1) and the clamp plates (2) with screws (4) and spring washers (3) to the spindle of the actuator; hand-tighten the screws.

Fig. 5 Mounting follower guide to actuator

2. Assemble the lever (if not yet pre-assembled)

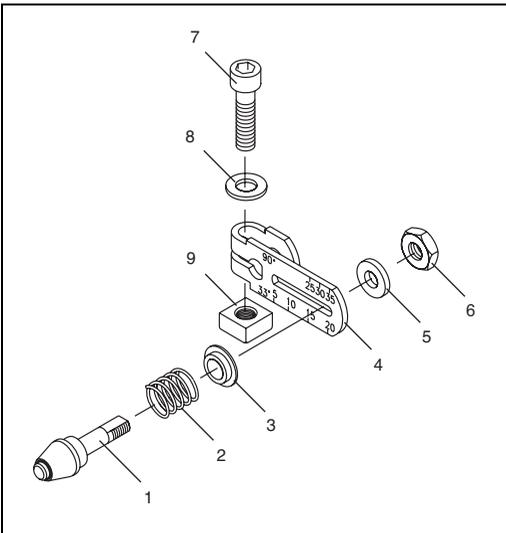

- Slip the spring (2) onto the bolt with the follower pin (1).
- Slip the plastic washer (3) onto the bolt and compress the spring with it.
- Insert the bolt with compressed spring into the oblong hole in the lever (4) and fasten it in the desired position using the plain washer (5) and nut (6) at the lever; the scale on the lever indicates the link point for the stroke range.
- Slip the plain washer (8) onto the screw (7), insert the screw into the lever and counter with the nut (9).

Fig. 6 Assembling the lever

3. Mount the lever and the angle bracket to the positioner


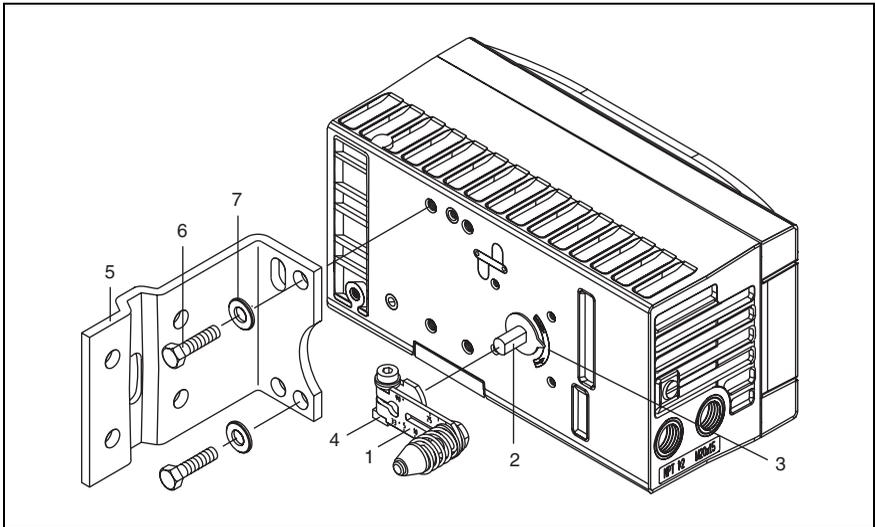


Fig. 7 Mounting lever and angle bracket to TZIDC-220

- Attach the lever (1) to the positioner's feedback shaft (2) (can only be mounted in one position due to the flat on the side of the feedback shaft).
- Check whether the lever travels within the operating range (between the arrows) by observing the arrow marks (3).
- Hand-tighten the screw (4) at the lever.
- Hold the preassembled positioner with the angle bracket (5) still loose in such a way against the actuator that the follower pin on the lever introduces into the follower guide, in order to determine the bore holes of the positioner to be used for the angle bracket.
- Fasten the angle bracket (5) with screws (6), and plain washers (7) to the corresponding bore holes in the positioner case; if possible, tighten the screws evenly to ensure linearity during operation. Align the angle bracket in the oblong hole to achieve a symmetrical operating range (between the arrow marks (3)).

4.a Mount the positioner to a cast iron yoke

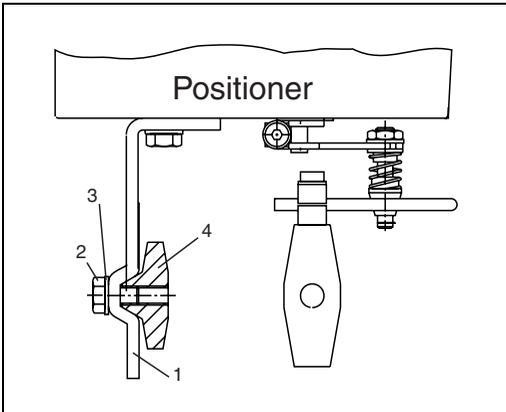


- Fasten the angle bracket (1) with screw (2), plain washer (3) to the cast iron yoke (4).

Fig. 8 Mounting to cast iron yoke

or

4.b Mount the positioner to a columnar yoke

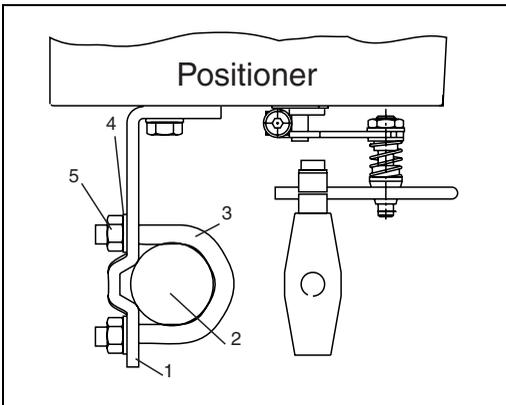

- Hold the angle bracket (1) in the appropriate position against the columnar yoke (2).
- Insert the U-bolts (3) from the inner side of the columnar yoke through the holes in the angle bracket.
- Slip on the plain washers (4), and nuts (5). Hand-tighten the nuts evenly.

Fig. 9 Mounting to columnar yoke

i

IMPORTANT

Adjust the height of the positioner at the cast iron yoke or the columnar yoke until the lever is horizontal (at visual check) at half valve stroke.

Check the unit for proper mounting after having made the pneumatic and electrical connection (see chapter "Commissioning" on page 26).

5. Adjust the stroke

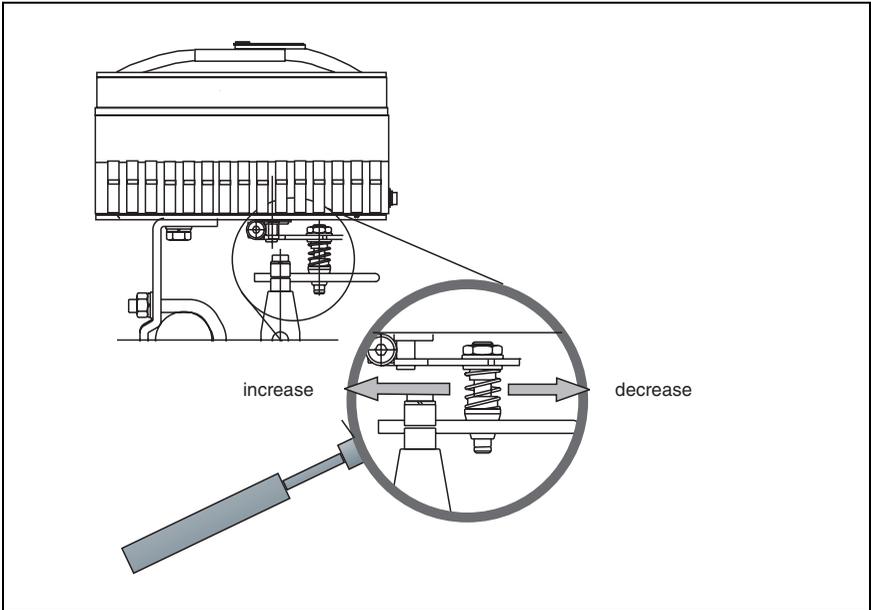


Fig. 10 Positioner linkage

The scale on the lever indicates the relevant points for the various valve stroke ranges.

You can adapt the valve stroke range to the operating range of the position sensor by shifting the bolt with follower pin in the oblong bore hole of the lever. When the link point is shifted to the inside, the position sensor's rotation angle is increased; shifting to the outside decreases the angle.

Set the stroke range in such a way that the used rotation angle of the position sensor is as great and as symmetrical around the center position as possible.

Recommended range for linear actuators: between -28° and $+28^\circ$

Minimum angle: 25°




After mounting, check whether the positioner operates within the sensor range.

IMPORTANT

Check the unit for proper mounting after having made the pneumatic and electrical connection (see chapter "Commissioning" on page 26).

3.1.4 Mounting the positioner to rotary actuators

The following mounting kit is available for mounting to a rotary actuator according to VDI/VDE 3845:

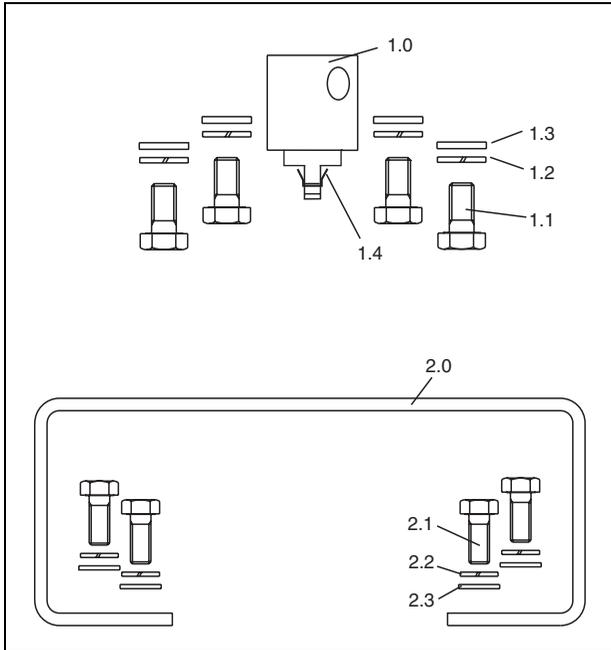

- Adapter (1.0) with spring (1.4)
- Four screws, M6 (1.1), four spring washers (1.2), and four plain washers (1.3) for fastening the bracket (2.0) to the positioner
- Mounting bracket (2.0)
- Four screws, M5 (2.1), four spring washers (2.2), and four plain washers (2.3) for fastening the bracket to the actuator

Fig. 11 Mounting kit for rotary actuators

Tools required:

Wrench 10 mm /13 mm
Allen key 3 mm

Follow the procedure (steps 1 - 3) below to attach the positioner to a rotary actuator:

1. Mount the adapter to the positioner

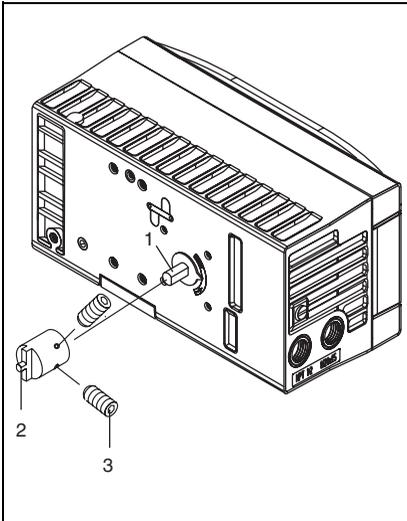


Fig. 12 Mounting the adapter

- Determine the mounting position (in parallel to the actuator or shifted by 90°).
- Determine the direction of rotation of the actuator (clockwise or counterclockwise).
- Move the rotary actuator to its home position.
- On the basis of the mounting position, the home position, and the direction of rotation it must be determined in which position the feedback shaft (1) of the positioner must be pre-adjusted and in which position the adapter (2) must be placed, to enable the positioner to travel within the correct range (the arrow on the rear of the device must travel within the admissible range, for details see Fig. 2 on page 11).
- Pre-adjust the feedback shaft.
- Place the adapter on the feedback shaft in the appropriate position and fix it by set-screws (3); ensure that one of the set-screws is engaged on the side of the feedback shaft with the flat.

2. Attach the mounting bracket (1) to the positioner

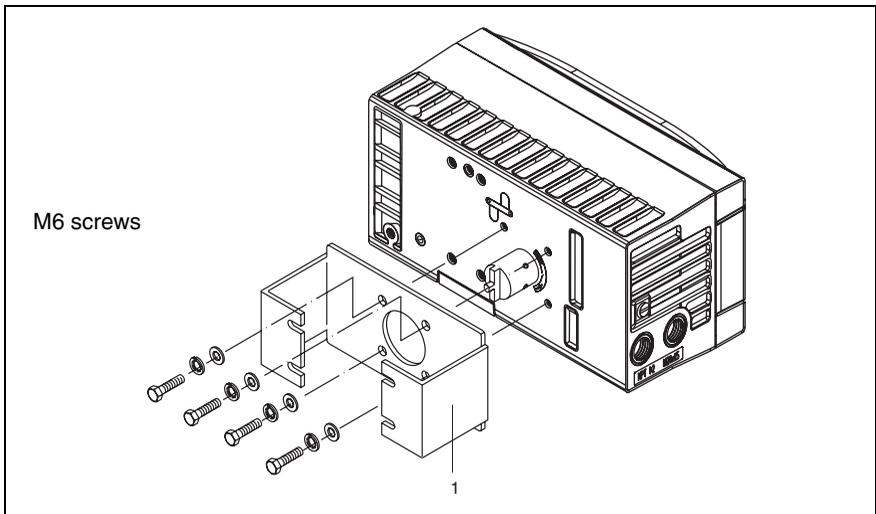


Fig. 13 Attaching the mounting bracket to the positioner

3. Attach the positioner to the actuator

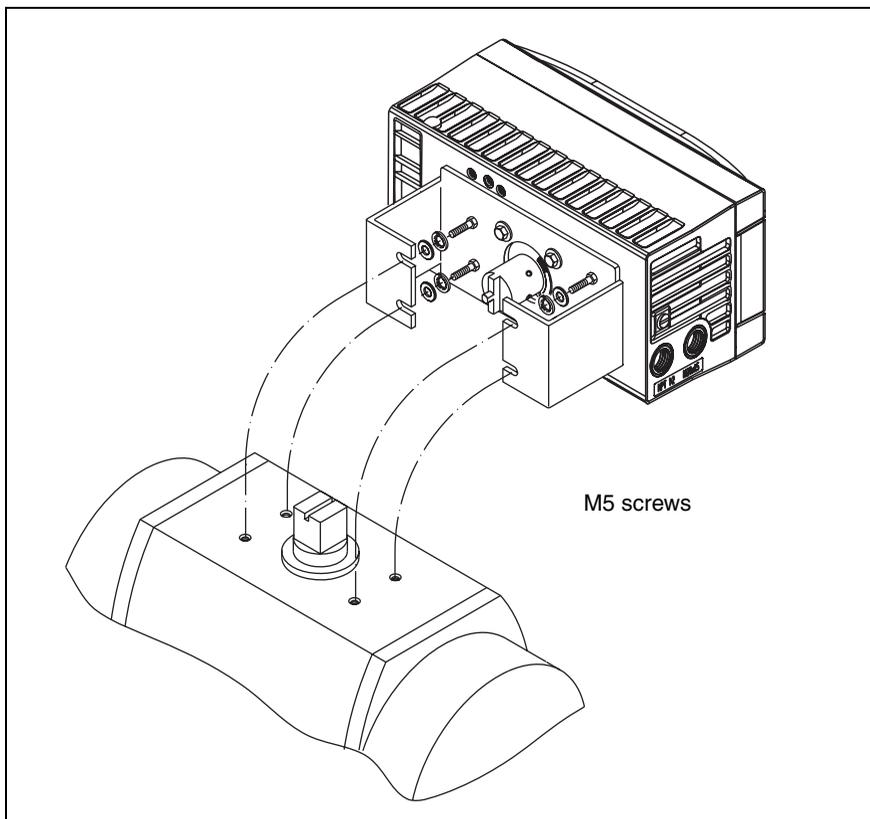


Fig. 14 Attaching the positioner to the actuator



After mounting, check whether the actuator's operating range is in accordance with the positioner's sensor range.

IMPORTANT Check the unit for proper mounting after having made the pneumatic and electrical connection (see chapter "Commissioning" on page 26).

3.2 Pneumatic connection

3.2.1 Safety instructions



- Observe the accident prevention rules of the Employers Liability Insurance Association.
- Observe the safety instructions for the pneumatic actuator used. The actuator's high actuating power may cause injuries!



- Take suitable precautions to ensure that even in case of malfunctions the positioner's max. admissible operating pressure of 6 bar (90 psi) is not exceeded. Otherwise, the positioner and/or the actuator may be damaged.
- The positioner must be supplied with instrument air exempt from oil, water and dust according to DIN/ISO 8573-1, Class 3
 - Purity: max. particle size 5 μm , max. particle density 5 mg/m^3
 - Oil content: max. concentration 1 mg/m^3
 - Pressure dew point: maximum value 10 K below operating temp.

Before connecting the air pipes blow them out to remove dust, splinters and other particles.

3.2.2 Making the pneumatic connections

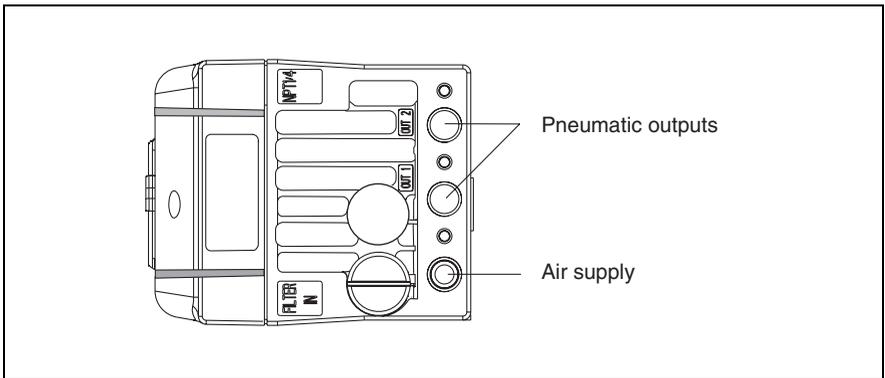


Fig. 15 Pneumatic connections

All pneumatic piping connections are located on the right-hand side of the positioner. Threaded bores G 1/4 or 1/4-18 NPT, respectively, are provided. The positioner is labeled according to the type of thread. The corresponding screwed pipe connections have to be supplied by the customer. We recommend pipes with the dimension 6 x 1 mm for the pneumatic piping.

The amount of supply pressure has to be matched to the working pressure necessary for the actuation. The positioner's operating range is between 1.4 and 6 bar.

The connections have to be arranged, according to their marks, in the following way:

Mark	Connection piping
-	Air supply, pressure 1.4...6 bar (20...90 psi)
OUT1	Output pressure, to actuator
OUT2	Output pressure, to actuator (for double-acting actuators)

3.3 Electrical connection

3.3.1 Safety instructions



- Observe the common VDE safety regulations and the accident prevention rules of the Employers Liability Insurance Association
- Observe the common standards and safety regulations for the installation and operation of electrical systems.
- When connecting the device, observe all electrical specifications in these operating instructions or in the data sheet.
- For the electrical installation of explosion-protected devices, observe all standards, regulations and directives governing explosion protection and applicable for the construction and use of explosion-protected systems, especially the DIN/VDE directives, the directives for explosion protection (VDE 0165 or EN 60079), and the special requirements and specifications for your devices (see chapter "Certificates" starting on page 40).
- Exclusively power devices with explosion protection via an electrically isolated circuit with safe extra-low voltage (SELV) in accordance with EN 60 950.

3.3.2 General installation instructions



Observe the following instructions. They are essential to proper operation and functionality of the positioner.

General

- Do not expose the terminals to strain.

Technical data

- When connecting the device, make sure that the electrical specifications in chapter 4 "Technical data" are observed.

Power supply

- The basic device is bus-powered via the Fieldbus connected to the bus terminals +(11)/-(12). The option modules must be supplied separately.
- When connecting a power source for test purposes without establishing a bus communication (e.g. when executing the *Autoadjust* function), a supply voltage between 9.0 V DC and a maximum of 32 V DC can be applied.



Electromagnetic interference

- Do not run bus/signal lines close to power lines. Power lines produce interference in their near vicinity which may affect the electrical capabilities of the bus/signal lines.
- Always use shielded cables conforming to the standards for the bus lines, to ensure electromagnetic compatibility (EMC). When running the device with the option modules (proximity switches, microswitches, shutdown module) use shielded cables for these modules as well. All cable shields must be kept as short as possible and have to be connected to protective ground on both sides (use the grounding screw in the TZIDC-220 connection compartment on the device side).
- Keep the case closed. Otherwise, the positioning action may be affected through EMI, resulting in a permanent positioning error, especially when the *Autoadjust* function is performed with the case open.

3.3.3 Overview

Two threaded bore holes 1/2 - 14 NPT or M20 x 1.5 are available on the left hand side as the cable entry into the case. One is equipped with a cable gland and in the other a pipe plug is mounted.

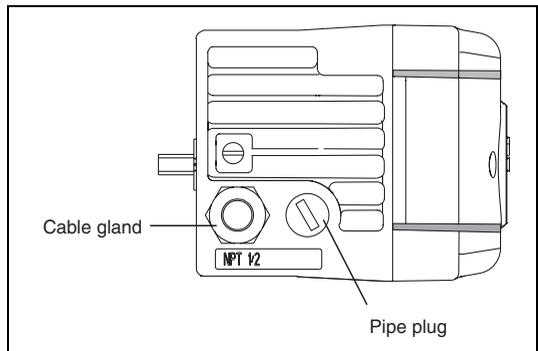


Fig. 16 Cable entry

The screw terminals inside the case are assigned as follows:

- 1 Not used
- 2 Service switch for the shutdown module
- 3 Terminals for the shutdown module
- 4 Kit for digital position feedback, either proximity switches or 24 V microswitches
- 5 Same as 4
- 6 Bus terminals
- 7 Grounding screw

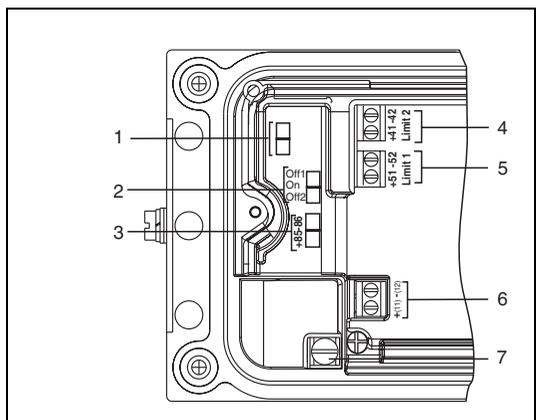


Fig. 17 Screw terminals

3.3.4 Making the electrical connections

1. Mount the cable gland



WARNING

Exclusively use EMC cable glands with full Ex-d approval for EEx d operation. Do not use partly approved cable glands labeled "U". They are NOT sufficient. The cable shield has to be applied in the cable entry.

Approved cable glands are available from ABB for 1/2 NPT or M20 x 1.5 threads.

Screw in the appropriate Ex-d cable gland and fix it with glue to secure it against loosening. Loctite 242 or similar glues are suitable.

Proceed as seen in the illustrations below:

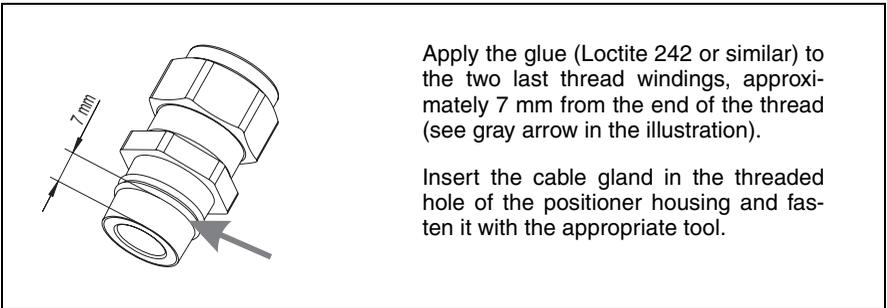


Fig. 18 Fastening the cable gland 1/2 NPT

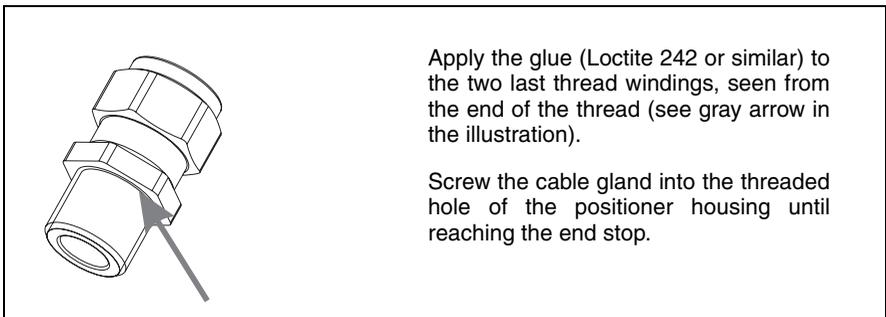


Fig. 19 Fastening the cable gland M20 x 1.5

2. Connect the wires to the terminals

- Remove approximately 8 mm of the insulation.
- When connecting the bus lines, shutdown module, proximity switches or microswitches, insert the wire ends from the left into the appropriate screw terminal and hand-tighten the screws (access from above).

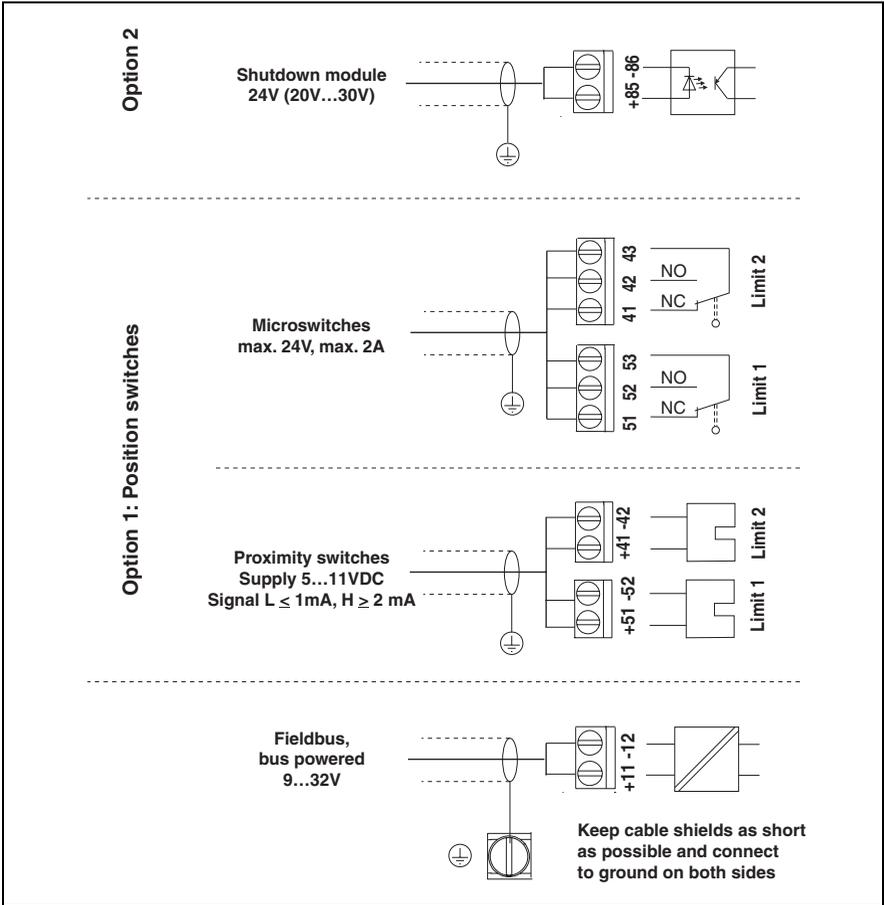


Fig. 20 Wiring diagram

3.4 Setting jumpers on the motherboard

Two jumpers can be set on the motherboard to enable/disable simulation or write access. Set the jumpers according to your needs as seen in the illustration below:

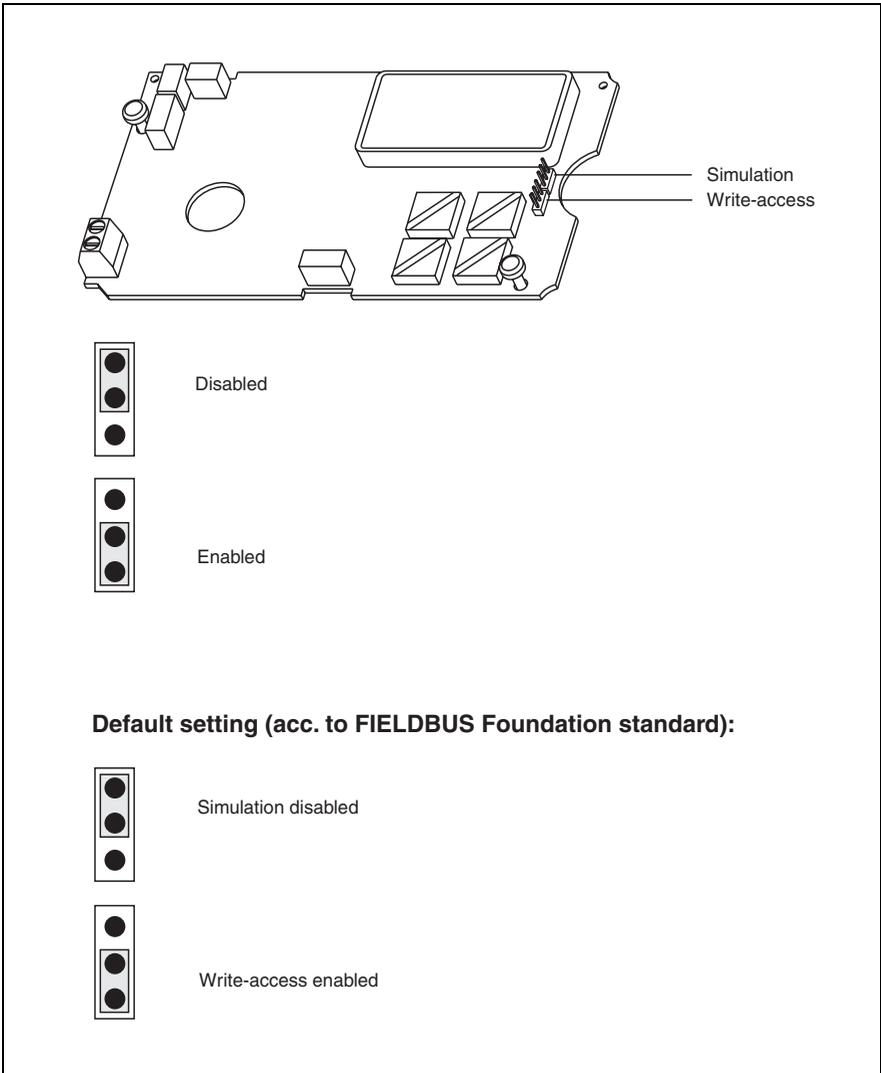


Fig. 21 Jumper setting

3.5 Commissioning



Important

The prerequisite for proper operation of the TZIDC-220 positioner on the bus is that the Transducer Block can change over to AUTO mode. This requires that the operating range of both the positioner and the valve be matched to each other (as described in step 5 of the procedure below). If this auto-adjustment should fail or cannot be performed for any reason, the Transducer Block remains in "Out of Service" mode and the configuration bit in the "BLOCK-ERR Parameter" is "active".

3.5.1 Procedure

1. Turn on the air supply to the positioner.
2. Connect the bus with arbitrary polarity (or auxiliary power 9 V DC ... 32 V DC) to the bus terminals.



is displayed.

3. Check for proper mounting:
 - Press and hold **MODE** and **ENTER** simultaneously. Wait until the countdown has run down from 3 to 0, then release **MODE** and **ENTER**. The operating level (mode 1.x) is reached and indicated.
 - Press and hold **MODE**.
 - Additionally briefly press **↑** or **↓** until mode **1.3** (manual adjustment within the sensor range) is displayed.
 - Release **MODE**.
 - Press **↑** or **↓** to move the actuator to its mechanical limit stops in both directions, and note the values. The angle of rotation is indicated in degrees.

Recommended range:

between -28° and +28° for linear actuators

between -57° and +57° for rotary actuators

Minimum angle: 25°



IMPORTANT

The positioner should be mounted/adjusted in such a way that the portions of the sensor's operating range above and below the center point are nearly identical. Make sure to use the rotation angle of the position sensor in the positioner to its utmost extent. Refer to chapter 3.1 "Mechanical mounting" for details about how to readjust/correct if required.

4. Return to the remote level.
 - Press and hold **MODE** and **ENTER**.
 - Wait until the countdown has run down from 3 to 0, then release **MODE** and **ENTER**.



is displayed.

5. Run the standard *Autoadjustment* function.
 - Make sure that the remote level is activated.

For linear actuators¹:

- Press and hold **MODE**. Wait until the countdown has run down from 5 to 0, then release **MODE**.
- Press and hold **MODE** again until the countdown has run down from 3 to 0, then release **MODE**.

Standard *Autoadjustment* is started automatically, and the progress is displayed.

For rotary actuators¹

- Press and hold **ENTER**.



- Wait until the display has changed to



- Release **ENTER**.
- Press and hold **ENTER** again until the countdown has run down from 3 to 0.
- Release **ENTER**.

Standard *Autoadjustment* is started automatically, and the progress is displayed. When standard *Autoadjustment* has completed successfully, the determined parameters are saved automatically, and the remote level is activated again. If, however, an error should occur during standard *Autoadjustment*, error code 255 is briefly indicated. The device then automatically changes over to parameter P1.1 *Autoadjust* (custom autoadjustment) at the configuration level.

- Press and hold **MODE**.
- Additionally, briefly press **↑** or **↓** several times until



- Release **MODE**. CANCEL is displayed. If not, briefly press **↑** or **↓**.
- Press and hold **ENTER** until the countdown has run down from 3 to 0.

The positioner automatically returns to the operating level. Press and hold **MODE** and additionally briefly press **↑** twice to reach operating mode 1.3 “*Manual adjustment within the sensor range*”. Then check the positioner-actuator assembly for proper mounting. Re-adjust if required (see chapter 3.1.3 or chapter 3.1.4 for details) and then start standard *Autoadjustment* again.

1. The zero position is automatically determined and saved by the standard autoadjustment function: turning counter-clockwise (CTCLOCKW) for linear and clockwise (CLOCKW) for rotary actuators.

3.5.2 Requesting bus information

Additional information about the bus can be called up for display by briefly pressing the buttons shown in the table when bus mode is active (i.e. the following display is seen):



Buttons pressed	Command/Action																				
	<p>Show setpoint value and state. The display shows the last valid setpoint value (SP_VALUE) and state (SP_STATE) from the transducer block for two seconds, each. Then the REMOTE display is seen again. The setpoint value is indicated as a percentage. The setpoint state is indicated as a code number, meaning the following:</p> <table border="0"> <thead> <tr> <th data-bbox="385 555 443 576">Code</th> <th data-bbox="557 555 953 576">Meaning (Status, sub-status, details)</th> </tr> </thead> <tbody> <tr> <td data-bbox="385 580 412 601">28</td> <td data-bbox="557 580 869 601">Bad, OutOfService, NotLimited</td> </tr> <tr> <td data-bbox="385 606 412 627">73</td> <td data-bbox="557 606 953 627">Uncertain, SubstituteValue, LowLimited</td> </tr> <tr> <td data-bbox="385 632 412 652">74</td> <td data-bbox="557 632 953 652">Uncertain, SubstituteValue, HighLimited</td> </tr> <tr> <td data-bbox="385 657 412 678">75</td> <td data-bbox="557 657 930 678">Uncertain, SubstituteValue, Constant</td> </tr> <tr> <td data-bbox="385 683 412 703">79</td> <td data-bbox="557 683 880 703">Uncertain, InitialValue, Constant</td> </tr> <tr> <td data-bbox="385 708 423 729">192</td> <td data-bbox="557 708 953 729">GoodCascade, NonSpecific, NotLimited</td> </tr> <tr> <td data-bbox="385 734 423 754">224</td> <td data-bbox="557 734 1003 754">GoodCascade, InitiateFaultState, NotLimited</td> </tr> </tbody> </table>	Code	Meaning (Status, sub-status, details)	28	Bad, OutOfService, NotLimited	73	Uncertain, SubstituteValue, LowLimited	74	Uncertain, SubstituteValue, HighLimited	75	Uncertain, SubstituteValue, Constant	79	Uncertain, InitialValue, Constant	192	GoodCascade, NonSpecific, NotLimited	224	GoodCascade, InitiateFaultState, NotLimited				
Code	Meaning (Status, sub-status, details)																				
28	Bad, OutOfService, NotLimited																				
73	Uncertain, SubstituteValue, LowLimited																				
74	Uncertain, SubstituteValue, HighLimited																				
75	Uncertain, SubstituteValue, Constant																				
79	Uncertain, InitialValue, Constant																				
192	GoodCascade, NonSpecific, NotLimited																				
224	GoodCascade, InitiateFaultState, NotLimited																				
	<p>Show current block mode. The display shows the current mode of the AO function block and the transducer block for approximately two seconds, each. Then the REMOTE display is seen again.</p> <p>The AO function block may have the following modes:</p> <table border="0"> <tbody> <tr> <td data-bbox="385 932 479 952">OOS_AO</td> <td data-bbox="557 932 790 952">AO block out of service</td> </tr> <tr> <td data-bbox="385 957 488 978">IMAN_AO</td> <td data-bbox="557 957 880 978">Initialization Manual of AO block</td> </tr> <tr> <td data-bbox="385 983 488 1003">AUTO_AO</td> <td data-bbox="557 983 757 1003">Automatic AO block</td> </tr> <tr> <td data-bbox="385 1008 479 1029">MAN_AO</td> <td data-bbox="557 1008 729 1029">Manual AO block</td> </tr> <tr> <td data-bbox="385 1034 479 1054">CAS_AO</td> <td data-bbox="557 1034 745 1054">Cascade AO block</td> </tr> <tr> <td data-bbox="385 1059 463 1080">LO_AO</td> <td data-bbox="557 1059 801 1080">Local Override AO block</td> </tr> <tr> <td data-bbox="385 1085 495 1106">RCAS_AO</td> <td data-bbox="557 1085 829 1106">Remote Cascade AO block</td> </tr> <tr> <td data-bbox="385 1110 495 1131">ROUT_AO</td> <td data-bbox="557 1110 807 1131">Remote Output AO block</td> </tr> </tbody> </table> <p>The transducer block may have the following modes:</p> <table border="0"> <tbody> <tr> <td data-bbox="385 1187 479 1208">OOS_TB</td> <td data-bbox="557 1187 729 1208">TB out of service</td> </tr> <tr> <td data-bbox="385 1212 488 1233">AUTO_TB</td> <td data-bbox="557 1212 695 1233">Automatic TB</td> </tr> </tbody> </table>	OOS_AO	AO block out of service	IMAN_AO	Initialization Manual of AO block	AUTO_AO	Automatic AO block	MAN_AO	Manual AO block	CAS_AO	Cascade AO block	LO_AO	Local Override AO block	RCAS_AO	Remote Cascade AO block	ROUT_AO	Remote Output AO block	OOS_TB	TB out of service	AUTO_TB	Automatic TB
OOS_AO	AO block out of service																				
IMAN_AO	Initialization Manual of AO block																				
AUTO_AO	Automatic AO block																				
MAN_AO	Manual AO block																				
CAS_AO	Cascade AO block																				
LO_AO	Local Override AO block																				
RCAS_AO	Remote Cascade AO block																				
ROUT_AO	Remote Output AO block																				
OOS_TB	TB out of service																				
AUTO_TB	Automatic TB																				
ENTER 	<p>Show software revision level and device type</p>																				

3.5.3 Local operation (bus device)

Procedure for mode selection from operating level:

1. Press and hold **MODE**.
2. Additionally briefly press **↑** as often as required.
The selected operating mode is indicated.
3. Release **MODE**.
4. The position is indicated as a percentage or rotation angle.

Overview

Mode	Mode display	Position display
1.1 Positioning with fixed setpoint. Setpoint can be adjusted by pressing ↑ or ↓ .		
1.2 Manual adjustment* within the operating range. Press ↑ or ↓ to adjust.**		
1.3 Manual adjustment* within the sensor range. Press ↑ or ↓ to adjust.**		

*) Positioning not active

***) For quick motion: Press **↑** and **↓** together.

3.5.4 Parameter setting example



An overview of the parameter settings that can be changed via the front panel keypad is found in Appendix A.

IMPORTANT

"Changing zero position (of the LCD) from clockwise to counter-clockwise"

Starting situation: the positioner is operating remote-controlled.

1. Change over from the remote level to the operating level:
 - Press and hold **MODE** and **ENTER** simultaneously.
 - Wait until the countdown has run down from 3 to 0.
 - Release **MODE** and **ENTER**. Mode 1.1 is reached and indicated.
2. Change over to the configuration level:
 - Simultaneously press and hold **↑** and **↓**.
 - In addition, briefly press **ENTER**.
 - Wait until countdown from 3 to 0 has run down.
 - Release **↑** and **↓**.



is displayed.

3. Change over to parameter group 3._:
 - Simultaneously press and hold **MODE** and **ENTER**.
 - In addition 2 x briefly press **↑**.



is displayed.

- Release **MODE** and **ENTER**.



is displayed.

4. Select parameter 3.2 "Zero position":

- Press and hold **MODE**.
- In addition, 2 x briefly press **↑**.



 
is displayed.

- Release **MODE**.

5. Change parameter setting:
 - Briefly press **↑** to select "CTCLOCKW".
6. Change over to parameter 3.3 "EXIT" and save the new setting:
 - Press and hold **MODE**.
 - In addition, 1 x briefly press **↑**.



- Release **MODE**.
 - Briefly press **↑** to select "NV_SAVE".
 - Press and hold **ENTER** until the displayed countdown from 3 to 0 has run down.
The positioner saves the new settings and automatically returns to the operating level.
7. Return to the remote level.
 - Press and hold **MODE** and **ENTER**.
 - Wait until the countdown has run down from 3 to 0.
 - Release **MODE** and **ENTER**.



3.6 Functional test / maintenance



WARNING

Do not make any changes to devices with explosion protection.



IMPORTANT

You should be aware of the fact that the positioner's warranty will expire immediately if you should modify or manipulate the electronics of a positioner without explosion protection.

The TZIDC-220 positioner is virtually maintenance free.

To ensure error-free and maintenance-free operation always supply the positioner with instrument air exempt from oil, water and dust according to DIN/ISO 8573-1 (purity and oil content acc. to Class 3, pressure dew point 10 K below the operating temperature).

We recommend to check the integrated air filter on a regular basis and replace it if required.

If the optionally installed filter regulator is installed, it has to be checked regularly as well. Additionally, the control position should be checked periodically for conformity with the tolerance limit.

3.6.1 Functional test of the shutdown module



WARNING

If the optional shutdown module is used, it must be subject to a functional test every two years at the latest to ensure full operational reliability in compliance with DIN V 19250. Otherwise, the AK4 approval will lapse.

Do not perform this test in a potentially hazardous atmosphere, as the case must be opened for testing. Either test the positioner in the workshop or lab or make sure that there is no explosion hazard.

Proceed as described below:

1. Remove the cover.



WARNING

Handle the cover with care! Otherwise, the sealing surface may be damaged. This will void the explosion protection (Ex d).

Grab the cover in the middle when opening. Do not cant! Place the cover on clean, even surfaces only! Avoid any pollution of the sealing surface.

2. Alternately set the slide switch (1) from the "On" position in the middle to the top and bottom position ("Off1" or "Off2") and check that the actuator is depressurized properly.

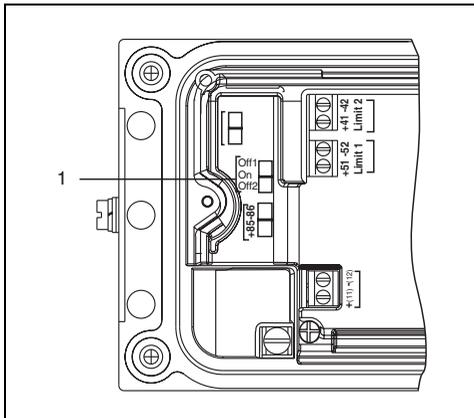


Fig. 22 Slide switch (service switch) of the shutdown module

3. Set the slide switch to the "On" position in the middle again.
4. Replace the cover.

4 Technical data

4.1 Fieldbus specifications

Physical

Specification	FOUNDATION Fieldbus™ Revision 1.5
Physical layer, profile class	Device type 113, 121 (IEC 61158-2)
Communication speed	31.25 Kbit/second
Current rating	11.5 mA
Fault current	15 mA (11.5 mA + 3.5 mA)
Operating voltage	Bus-powered: 9.0 V DC to 32.0 V DC
Max. withstand voltage	35 V DC
ATEX-certified for FISCO	Yes
Polarity-sensitiveness	Not sensitive to polarity reversal

Communications

Class	LM profile 32L, 31PS
Number of free VCRs	23 (No. of VCRs of which the application can be changed, except for the VCR used for management)

User layer

Function blocks provided	1 AO Function Block, 1 PID Block
Execution time	AO Block: 40 ms; PID Block: 50 ms
Block class	AO Block: standard; PID Block: enhanced Resource Block: enhanced; Transducer Block: custom
Number of linkage objects	22
Device description (DD)	Rev. No. 1 (file name: 0201.ffo, 0201.sym)
File	Common file format (file name: 020101.cff)
FF Certification	Registered with ITK 4.51, Dec. 2003 IT Camp. Number IT023200
Documentation	Configuration and parameter setting instructions, 45/18-82 EN
Support of "Incremental DD"	No
Calibration and diagnostic information defined in DD	Yes
Support of self-tuning	Supports self-tuning of the working range on the valve. Control loop "self-tuning" through the PID function block is not supported.
Delivery state	The positioner is delivered in an unadjusted state. The standard autoadjustment function has to be run to adapt the working range and control parameters. Otherwise the transducer block will remain in "Out of service" mode.
Diagnostic capabilities	Self-diagnostic of positioner hardware and software. Basic valve diagnostics incl. extended alarm handling

4.2 Basic model

Name

Device tag

ABB POSITIONER TZIDC-120 xxxxxx

Device ID

0003200028_____TZIDC-120 xxxxxx

Device address

Between 10 and 247, default node address 23

Output

Range

0...6 bar (0...90 psi)

Air capacity

at supply pressure of 1.4 bar (20 psi)

5.0 kg/h = 3.9 Nm³/h = 2.3 scfm

at supply pressure of 6 bar (90 psi)

13 kg/h = 10 Nm³/h = 6.0 scfm

(Booster, for increasing air capacity, on request)

Output function

for single or double acting actuators,

air is vented from actuator or actuator is blocked in case of an electrical power failure

Shut-off values

end position 0 % = 0...45 %

end position 100 % = 55...100 %

Travel

Angle of rotation

Used range 25...120 ° (rotary actuators, optionally 270°)

25...60 ° (linear actuators)

Travel time prolongation

Range of 0...200 seconds, separately for each direction

Air supply

Instrument air

free of oil, water and dust to DIN/ISO 8573-1

pollution and oil content according to Class 3

purity: max. particle size 5 µm, max. particle density 5 mg/m³;

oil content: max. concentration 1 mg/m³;

pressure dew point: 10 K below operating temperature

Supply pressure

1.4...6 bar (20...90 psi)

NOTICE: Do not exceed the actuator's max. operating pressure!

Air consumption

< 0.1 kg/h (0.05 scfm) (independent of supply pressure)

Transmission data and influences

Output pressure (OUT 1)

- Increasing: increasing signal 0...100 %
increasing output pressure OUT 1
- Decreasing: increasing signal 0...100 %
decreasing output pressure OUT 1

Characteristic deviation

≤ 0.5 %

Tolerance band

0.3...10 %, adjustable

Dead band

0.1...10 %, adjustable

Resolution (A/D conversion)

> 16,000 steps

Sample rate

20 msec

Influence of ambient temperature

≤ 0.5 % for every 10 °C change in temperature

Influence of vibration

≤ +/-1 % up to 10 g and 80 Hz

Seismic requirements

Meets requirements of DIN/IEC 68-3-3 Class III for strong and strongest earthquakes

Influence of mounting orientation

No effect

Meets the requirements of the following directives

EMC Directive 89/336/EEC as of May 1989
EC Directive for CE conformity marking

Environmental capabilities

Ambient temperature

-40 °C to +85 °C for operation, storage and transport
-25 °C to +85 °C when using proximity switches SJ2-S1N (NO)

Relative humidity

Operational (with closed case and air supply switched on):
95 % (annual average), condensation permissible
Transport and storage:
75 % (annual average), non-condensing

Case

Material/Protections

Aluminum, protection class IP 65 (NEMA 4X)

Surface/color

Electrostatic dipping varnish with epoxy resin, stove-hardened
Case varnished black, RAL 9005, matt,
Cap Pantone 420

Electrical connections

Screw terminals:
max. 1.0 mm² for options, max. 2.5 mm² for bus connection
NOTICE: Do not expose the terminals to strain!
Cable entry
2 threads 1/2-14 NPT or M20x1.5
for cable diameter 6...12 mm
(cable gland or pipe plug must be ordered separately)

Pneumatic connections

Threads G 1/4 or 1/4-18 NPT

Weight

3.0 kg

Mounting orientation

any orientation allowed

Dimensions

see dimensional drawings in data sheet 10/18-0.34 EN

Explosion protection



WARNING

The values indicated here have been taken out of the respective approval certificates.
Always observe the specifications and supplements in the certificates (see chapter "Certificates" starting on page 40).

FM Approval HLC 7/04

3019164

Explosion proof; enclosure 4X; T5, max. 82°C
CL I, Div. 1, Groups C, D

Dust ignition-proof; enclosure 4X; T5, max. 82°C
CL II, III, Div. 1, Groups E, F, G

CSA Certificate

1555690

Explosion proof; enclosure 4X;
Temperature range -40 °C to 85 °C
T5, max. 85°C; T6, max. 70 °C
CL I, Div. 1, Groups C, D
CL II, Div. 1, Groups E, F, G
CL III

ATEX

Type examination certificate
 Type:
 Device class:
 Temperature class:
 Perm. amb. temperature:

II 2G EEx d IIC T4/T5/T6

DMT 02 ATEX E 029 X
Flameproof enclosure
 II 2G (EEx d IIC)
 T4, T5, T6
 T4: $-40\text{ °C} \leq T_{\text{amb}} \leq 85\text{ °C}$
 T5: $-40\text{ °C} \leq T_{\text{amb}} \leq 80\text{ °C}$
 T6: $-40\text{ °C} \leq T_{\text{amb}} \leq 65\text{ °C}$

ATEX

Type examination certificate
 Type:
 Device class:
 Temperature class:
 Perm. ambient temperature:

II 2G EEx ia II C T6

TÜV 02 ATEX 1834 X
Intrinsically safe
 II 2G (EEx ia IIC)
 T4, T5, T6
 T4: $-40\text{ °C} \leq T_{\text{amb}} \leq 85\text{ °C}$
 T5: $-40\text{ °C} \leq T_{\text{amb}} \leq 55\text{ °C}$
 T6: $-40\text{ °C} \leq T_{\text{amb}} \leq 40\text{ °C}$

IECEx

Examination certificate
 Type:
 Temperature class:
 Perm. ambient temperature:

Ex ia IIC T6

IECEx TUN 04.0015X, Issue No.: 0
Intrinsically safe
 T4, T5, T6
 T4: $-40\text{ °C} \leq T_{\text{amb}} \leq 85\text{ °C}$
 T5: $-40\text{ °C} \leq T_{\text{amb}} \leq 55\text{ °C}$
 T6: $-40\text{ °C} \leq T_{\text{amb}} \leq 40\text{ °C}$

Signal current circuit for FOUNDATION Fieldbus™, only for connection to a certified intrinsically safe circuit (e.g. FISCO power unit or barrier) with the following max. values:

	FISCO power supply ia/ib for group IIB/IIC	FISCO power supply ia/ib for group IIB/IIC	Barrier or power supply ia/ib for group IIB/IIC
Voltage	$U_i = 17.5\text{ V}$	$U_i = 17.5\text{ V}$	$U_i = 24\text{ V}$
Current	$I_i = 380\text{ mA}$	$I_i = 360\text{ mA}$	$I_i = 250\text{ mA}$
Power	$P_i = 5.32\text{ W}$	$P_i = 2.52\text{ W}$	$P_i = 1.2\text{ W}$
Characteristic line	rectangular	trapezoidal	linear

4.3 Options

Module for the shutdown function

Supply voltage	24 V DC (20...30 V DC) (electrically isolated from the input signal)
Safe position is activated	when voltage < 5 V
AK approval	AK 4 to DIN V 19250
Test report No.	101/S01/148
Explosion protection	see chapter "Certificates" starting on page 40

A separate 24 V DC signal is normally applied to the shutdown module, which connects through the signal from the microprocessor to the I/P module. When the 24 V DC signal is interrupted, the I/P module executes the respective safety function, depending on the mechanical construction.

Fail safe:

The positioner output 1 is depressurized, and the valve moves to the safe position. In case of a double-acting actuator the second output is additionally pressurized.

Fail-freeze:

The pneumatic output 1 is closed, and the valve "freezes" in its current position. In case of a double-acting actuator both outputs are closed.

The shutdown module works independently of the mother board, i.e. all information from the final control element is available in the supervisory process control system at any time.

Digital position feedback with proximity switches ¹

2 proximity switches for independent position signaling.
Switching points adjustable between 0 and 100 %

Current circuits to DIN 19234 / NAMUR

Supply voltage	5...11 V DC
Signal current < 1 mA	logical "0"
Signal current > 2 mA	logical "1"

Direction of action (logical state):

Proximity switch	Position			
	< Lim. 1	> Lim. 1	< Lim. 2	> Lim. 2
SJ2-SN (NC)	0	1	1	0
SJ2-S1N (NO)	1	0	0	1



NOTICE

When using proximity switch type SJ2-S1N (NO) the TZIDC-220 positioner may be exposed to an ambient temperature of -25 °C ... +85 °C, only.

1. The 'digital position feedback' option is directly actuated by the rotating shaft of the positioner and can only be used together with the (optional) mechanical position indicator.

Digital position feedback with 24 V microswitches ¹



Only approved for Ex d version!

WARNING

Two microswitches for independent position signaling.
Switching points adjustable between 0 and 100 %

Voltage max. 24 V AC / DC

Current load max. 2 A

Contact surface 10 µm gold (AU)

Mechanical position indicator

Indicator disk in enclosure cover, linked with positioner feedback shaft through magnetic coupling

-
1. The 'digital position feedback' option is directly actuated by the rotating shaft of the positioner and can only be used together with the (optional) mechanical position indicator.



FM Approvals
1151 Boston-Providence Turnpike
P.O. Box 9102 Norwood, MA 02062 USA
T: 781 762 4300 F: 781 762 9375 www.fmglobal.com

CERTIFICATE OF COMPLIANCE

HAZARDOUS (CLASSIFIED) LOCATION ELECTRICAL EQUIPMENT

This certificate is issued for the following equipment:

V18349-a0b2d3ef3gh, TZIDC-210 Positioner

XP/ I / 1/ CD/ T5 Ta = 82°C; DIP/ II, III/ 1/ EFG/ T5 Ta = 82°C; Type 4
a = Case/Mounting 1, 2, 3, 4, 5 or 6
b = Operation panel and display 1
d = Output/Safe Protection 1, 2, 3 or 4
e = Option modules Shutdown module 0 or 5
f = Mechanical kit for (proximity switches) for digital position feedback/micro-switches 0, 1, 2 or 3
g = Design (varnish/coding) 1 or 2
h = Device identification label 0, 1 or 2

V18350- a0b2d3ef4gh, TZIDC-220 Positioner

XP/ I / 1/ CD/ T5 Ta = 82°C; DIP/ II, III/ 1/ EFG/ T5 Ta = 82°C; Type 4X
a = Case/Mounting 1, 2, 3, 4, 5 or 6
b = Operation panel and display 1
d = Output/Safe Protection 1, 2, 3 or 4
e = Option modules Shutdown module 0 or 5
f = Mechanical kit for (proximity switches) for digital position feedback/micro-switches 0, 1, 2 or 3
g = Design (varnish/coding) 1 or 2
h = Device identification label 0, 1 or 2

Equipment Ratings:

Explosionproof for Class I, Division 1 Groups C & D, T5 Ta = 82°C; Dust-ignitionproof for Class II/III, Division 1, Groups E, F and G; T5 Ta = 82°C; Hazardous (Classified) Locations indoor/outdoor (NEMA Type 4X)

Approved for:

ABB AUTOMATION PRODUCTS GmbH
SCHILLERSTR. 72
32425 MINDEN, GERMANY

FM Approvals HLC 7/04

3019164
Page 1 of 2





This certifies that the equipment described has been found to comply with the following FM Approval Standards and other documents:

Class 3600	1998
Class 3810	1989
(with supplement 1)	1995
Class 3615	1989
ANSI/NEMA 250	1991

Original Project ID: 3019164

FM Approval Granted: *Dec. 7, 2004*

Subsequent Revision Reports / Date FM Approval Amended

Report Number	Date	Report Number	Date
---------------	------	---------------	------

FM Global Technologies LLC

Robert L. Martell, Jr.

Robert L. Martell, Jr.
Assistant Vice President
FM Approvals

Dec 7, 2004

Date



Certificate of Compliance

Certificate: 1555690

Master Contract: 203012

Project: 1555690

Date Issued: 2005/01/11

Issued to: ABB Automation Products GmbH

72 Schillerstrasse
Minden, 32425
Germany
Attention: Mr. Ralf Schaffer

The products listed below are eligible to bear the CSA Mark shown



Issued by: Marin Banu, P. Eng.

Authorized by: Nick Alfano, Operations
Manager

PRODUCTS

Class I, Div 1, Groups C and D; Class II, Div 1, Groups E, F and G; Class III; Type 4X

Models TZIDC-210 and TZIDC-220, Positioner; input rated 32V dc max, 15mA max. (powered by a SELV circuit); control pressure 20 to 90 psi; T 5 @ max ambient 85 °C; T 6 @ max ambient 70 °C. Operational temperature range -40 °C to 85 °C.

TZIDC-210 Positioner

V18349-a0b2d3ef3gh

XP

DQD 507 2003/01/31



Certificate: 1555690

Master Contract: 203012

Project: 1555690

Date Issued: 2005/01/11

a = Case/Mounting 1, 2, 3, 4, 5, or 6

b = Operation panel and display 1

d = Output/Safe Protection 1, 2, 3 or 4

e = Option modules Shutdown module 0 or 5

f = Mechanical kit for (proximity switches) for digital position feedback/ microswitches 0, 1, 2 or 3

g = Design (varnish/coding) 1 or 2

h = Device identification label 0, 1 or 2

TZIDC-220 Positioner

V18350-a0b2d3ef4gh

XP

a = Case/Mounting 1, 2, 3, 4, 5, or 6

b = Operation panel and display 1

d = Output/Safe Protection 1, 2, 3 or 4

e = Option modules Shutdown module 0 or 5

f = Mechanical kit for (proximity switches) for digital position feedback/ microswitches 0, 1, 2 or 3

g = Design (varnish/coding) 1 or 2

h = Device identification label 0, 1 or 2

APPLICABLE REQUIREMENTS

CAN/CSA-C22.2 No. 25-1966 - Enclosures for use in Class II Groups E, F and G Hazardous Location

CSA Std C22.2 No. 30-M1986 - Explosion-Proof Enclosures for Use in Class I Hazardous Locations

CAN/CSA-C22.2 No. 94-M91 - Special Purpose Enclosures

CSA Std C22.2 No. 142-M1987 - Process Control Equipment

CAN/CSA-C22.2 No. 1010-92 - Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use. Part 1: General Requirements



Certificate: 1555690

Master Contract: 203012

Project: 1555690

Date Issued: 2005/01/11

IEC 1010-2-071 - Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use, Part 2-071: Particular Requirements for Equipment Used in Extended Environments

MARKINGS

- CSA Monogram
- Submitter's Name
- Model Number
- Serial Number
- Electrical Rating
- Hazardous Location Designation
- Special Purpose Enclosure Designation, "Type 4X"
- Maximum Ambient
- Warning: Keep cover tight while circuits are live.



Supplement to Certificate of Compliance

Certificate: 1555690

Master Contract: 203012

The products listed, including the latest revision described below, are eligible to be marked in accordance with the referenced Certificate.

Product Certification History

Project	Date	Description
1555690	2005/01/11	Original certification



Translation

(1) **EC-TYPE EXAMINATION CERTIFICATE**

- (2) Equipment or protective system intended for use in potentially explosive atmospheres - **Directive 94/9/EC**
- (3) EC-Type Examination Certificate Number



TÜV 02 ATEX 1834 X

- (4) Equipment: Positioner type TZID-C120 resp. TZID-C220
- (5) Manufacturer: ABB Automation Products GmbH
- (6) Address: Schillerstrasse 72
D-32425 Minden
- (7) This equipment or protective system and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.
- (8) The TÜV NORD CERT GmbH & Co. KG, TÜV CERT-Certification Body, notified body number N° 0032 in accordance with Article 9 of the Council Directive of the EC of March 23, 1994 (94/9/EC), certifies that this equipment or protective system has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres given in Annex II to the Directive.

The examination and test results are recorded in the confidential report N° 02 YEX 164933.

- (9) Compliance with the Essential Health and Safety Requirements has been assured by compliance with:

EN 50 014:1997

 
EN 50 020:1994

- (10) If the sign "X" is placed after the certificate number, it indicates that the equipment or protective system is subject to special conditions for safe use specified in the schedule to this certificate.
- (11) This EC-type examination certificate relates only to the design, examination and tests of the specified equipment in accordance to the Directive 94/9/EC. Further requirements of the Directive apply to the manufacturing process and supply of this equipment. These are not covered by this certificate.
- (12) The marking of the equipment or protective system must include the following:



II 2 G EEx ia IIC T6

TÜV NORD CERT GmbH & Co. KG
TÜV CERT-Certification Body
Am TÜV 1
D-30519 Hannover
Tel.: 0511 986-1470
Fax: 0511 986-2555


Head of the
Certification Body

Hanover, 2002-05-08



TÜV NORD CERT

TÜV CERT A4 04.02 10.000 L6

This certificate may only be reproduced without any change, schedule included.
Excerpts or changes shall be allowed by the TÜV NORD CERT GmbH & Co. KG

page 1/3

(13)

SCHEDULE

(14) **EC-TYPE EXAMINATION CERTIFICATE N° TÜV 02 ATEX 1834 X**

(15) Description of equipment

The positioner type TZID-C120 resp. TZID-C220 is used for the control resp. closed loop control of pneumatically driven valves. The reference value is transmitted via field bus. A integrated position sensor detects the current position of the valve drive.

An integrated current/pressure transformer (I/P) is used for the control of the pneumatic auxiliary power.

The permissible ambient temperature range in dependence on the temperature class has to be taken from the following table:

Temperature class	Ambient temperature range
T4	- 40 °C to + 85 °C
T5	- 40 °C to + 55 °C
T6	- 40 °C to + 40 °C

Electrical data

Input circuit
(terminal +11, -12 resp. +, -)

in type of protection „Intrinsic Safety“ EEx ia IIC
resp. EEx ib IIC
only for the connection to a certified intrinsically safe circuit (e.g. FISCO power supply) with the maximum values according to the following table:

	FISCO power supply ia / ib for group IIB / IIC	FISCO power supply ia / ib for group IIB / IIC	Barrier or power supply ia / ib for group IIB / IIC
Voltage	17.5 V	17.5 V	24 V
Current	380 mA	360 mA	250 mA
Power	5.32 W	2.52 W	1.2 W
Characteristic line	rectangular	trapezoidal	linear

L_i negligibly small
 C_i negligibly small

Circuit for shutdown function
(terminal +85 and -86)

in type of protection „Intrinsic Safety“ EEx ia IIC
resp. EEx ib IIC
only for the connection to certified intrinsically safe circuits with the maximum values of:
 $U_i = 30 \text{ V}$

$C_i = 3.7 \text{ nF}$
 L_i negligibly small



Circuit for digital position
feedback with proximity switches
resp. Limit2 +41, -42)

maximum values see EG-type examination certificate
No. PTB 00 ATEX 2049 X

Local communication interface (LKS)
and programming interface (X5)

for the connection to the programmer resp. PC
outside of the hazardous area

(16) Test documents are listed in the test report No.: 02 YEX 164933.

(17) Special conditions for safe use

The operation of the local communication interface (LKS) and of the programming interface (X5) is only allowed outside of the hazardous explosive area.

(18) Essential Health and Safety Requirements

no additional ones



Translation

1. SUPPLEMENT to

EC TYPE-EXAMINATION CERTIFICATE No. TÜV 02 ATEX 1831 X

of the company: ABB Automation Products GmbH
Schillerstraße 72
D-32425 Minden

In the future the Positioner type TZID-C110 resp. TZID-C210 may also be manufactured according to the test documents listed in the test report. The modifications refer to the internal construction as well as the extended type designation. This reads type TZIDC-110 resp. TZIDC-210. Further on the „Special conditions for safe use“ were amended.

All other data remain unchanged.

(16) Test documents are listed in the test report N° 03 YEX 551065.

(17) Special conditions for safe use

Variants, which also comply with the type of protection „Flameproof Enclosure“ according to a separate certificate, may not be operated intrinsically safe after use as apparatus in the type of protection „Flameproof Enclosure“.

(18) Essential Health and Safety Requirements

no additional ones

TÜV NORD CERT GmbH & Co. KG
TÜV CERT-Certification Body
Am TÜV 1
D-30519 Hannover
Tel.: 0511 986-1470
Fax: 0511 986-2555

Hanover, 2003-11-25

Head of the
Certification Body



Translation

EC-Type Examination Certificate

- (1)
- (2) **- Directive 94/9/EC -**
Equipment and protective systems intended for use
in potentially explosive atmospheres
- (3) **DMT 02 ATEX E 029 X**
- (4) **Equipment:** Stellungenregler Type Doc. 901132
- (5) **Manufacturer:** ABB Automation Products GmbH
- (6) **Address:** D 32425 Minden
- (7) The design and construction of this equipment and any acceptable variation thereto are specified in the schedule to this type examination certificate.
- (8) The certification body of Deutsche Montan Technologie GmbH, notified body no. 0158 in accordance with Article 9 of the Directive 94/9/EC of the European Parliament and the Council of 23 March 1994, certifies that this equipment has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres, given in Annex II to the Directive.
The examination and test results are recorded in the test and assessment report BVS PP 02.2009 EG.
- (9) The Essential Health and Safety Requirements are assured by compliance with:
- | | |
|-------------------------|----------------------|
| EN 50014:1997 + A1 – A2 | General requirements |
| EN 50018: 2000 | Flameproof enclosure |
- (10) If the sign "X" is placed after the certificate number, it indicates that the equipment is subject to special conditions for safe use specified in the schedule to this certificate.
- (11) This EC-Type Examination Certificate relates only to the design, examination and tests of the specified equipment in accordance to Directive 94/9/EC.
Further requirements of the Directive apply to the manufacturing process and supply of this equipment. These are not covered by this certificate
- (12) The marking of the equipment shall include the following:

II 2G EEx d IIC T4/T5/T6

Deutsche Montan Technologie GmbH

Essen, dated 31. January 2002

Signed: Dill

DMT-Certification body

Signed: Eickhoff

Head of special services unit

(13) Appendix to

(14) **EC-Type Examination Certificate**

DMT 02 ATEX E 029 X

(15) 15.1 Subject and type
Positioner type Doc. 901132

15.2 Description

The positioner is designed for the transmission of an electrical signal into a pneumatic signal.

Certain variants of the electronics may be used intrinsically safe according to separate certification (see 7.3)

As pressure media neither flammable gases nor oxygen or oxygen enriched gases will be used.

15.3 Parameters

15.3.1	Electrical data				
	Voltage		≤ AC/DC	30 V	
	Current		≤	20 mA	
15.3.2	Pneumatic data				
	Supply pressure		≤	6 bar	
15.3.3	Thermal data				
	Temperature class		T4	T5	T6
	Ambient temperature range	-40 °C ≤ Ta ≤	85 °C	80 °C	65 °C

(16) Test and assessment report
BVS PP 02.2009 EG as of 31.01.2002

(17) Special conditions for safe use

- 17.1 As per 4.3, the positioner is designed for use at an ambient temperature range of -40 °C up to 85 °C at maximum.
- 17.2 If the positioner is used at an ambient temperature above 60 °C or below -20 °C, cable entries and cable approved for a service temperature corresponding to the maximum ambient temperature increased by 10 K respectively corresponding to the minimum ambient temperature shall be used.
- 17.3 Variants which, according to separate certification, comply with type of protection intrinsic safety, shall not be used intrinsically safe once they have been used in type of protection flameproof enclosure.

We confirm the correctness of the translation from the German original.
In the case of arbitration only the German wording shall be valid and binding.

45307 Essen, 31.01.2002
BVS-We/Mi A 20010478

Deutsche Montan Technologie GmbH


DMT-Certification body


Head of special services unit



Translation



1st Supplement

(Supplement in accordance with Directive 94/9/EC Annex III number 6)

to the EC-Type Examination Certificate DMT 02 ATEX E 029 X

Equipment: Positioner type Doc. 901132
Manufacturer: ABB Automation Products GmbH
Address: D - 32425 Minden

Description

The positioner can be modified according to the descriptive documents as mentioned in the pertinent test and assessment report

Test and assessment report

BVS PP 02.2009 EG as of 11.07.2002

Deutsche Montan Technologie GmbH

Essen, dated 11. July 2002

Jockers

DMT-Certification body

Eickhoff

 
Head of special services unit

We confirm the correctness of the translation from the German original.
In the case of arbitration only the German wording shall be valid and binding.

45307 Essen, 11.07.2002
BVS-We/Mi A 20020357

Deutsche Montan Technologie GmbH


DMT-Certification body


Head of special services unit

Page 1 of 1 to DMT 02 ATEX E 029 X/N1
This certificate may only be reproduced in its entirety and without change.
Am Technologiepark 1, 45307 Essen, Telefon (0201)172-1416, Telefax (0201)172-1716



Deutsche
Montan Technologie GmbH

DIN EN ISO
9001
zertifiziert

Fachstelle für Sicherheit
elektrischer Betriebsmittel -
Bergbau-Versuchsstrecke

Prüfprotokoll - Test and Assessment Report 1. Nachtrag – 1st Supplement BVS PP 02.2009 EG

**EG - Baumusterprüfung für Geräte und Komponenten
zur Verwendung in explosionsgefährdeten Bereichen
(Richtlinie 94/9/EG)**

**EC - Type Examination for Equipment and Components
Intended for Use in Potentially Explosive Atmospheres
(Directive 94/9/EC)**



DAR-Reg.-Nr.:
ZLS-P-359-2/01

Gegenstand: Gerät Typ Subject: Equipment type	Stellungsregler Typ Doc. 901132 Positioner type Doc. 901132
Hergestellt und zur Prüfung vorgelegt Manufactured and submitted for examination	ABB Automation Products GmbH
Anschrift Address	D-32425 Minden, Schillerstraße 32
Prüfgrundlage Basis for verifications and tests	Anhang II der Richtlinie 94/9/EG Annex II of Directive 94/9/EC
Verwendete Normen Standard basis	EN 50014:1997+A1-A2 Allgemeine Bestimmungen General requirements EN 50018:2000 Druckfeste Kapselung Flameproof enclosure 'd'
Prüfgrundlage für Sicherheits- und Gesundheitsanforderungen, die nicht von den verwendeten Normen abgedeckt werden. Basis for those health and safety requirements not covered by the standard basis	Entfällt Not relevant
Schutzartkennzeichen Code for type of protection	EEx d IIC T4/T5/T6
Antragsnummer Project number	A 20020357

Seite 1 von 4 zum Prüfprotokoll - Page 1 of 4 of Test Report BVS PP 02.2009 EG / N1

Dieses Prüfprotokoll darf nur vollständig und unverändert vervielfältigt werden
This test and assessment report may only be reproduced in its entirety and without change

Dinnendahlstraße 9 D-44809 Bochum Telefon-Phone 0201/172 3855 Telefax-Fax 0201/172 3924

1) **Gegenstand und Typ**

Stellungsregler Typ Doc. 901132

Subject and Type

Positioner type Doc. 901132

2) **Beschreibung**

Alternativ werden die Einführungsbohrungen geändert. Die Sintermetallscheibe Ø10 mm wird neu festgelegt.

Description

Alternatively, the entry threads are modified. The sinter disk Ø10 mm is re-defined.

3) **Dokumentation - Descriptive Documents**

Zeichnung Nr. - Drawing No.	vom - dated	unterschrieben am - signed
901137	15.01.02/14.06.02	14.06.02

4) **Kenngößen - Parameters**

Unverändert - Without change

5) **Kennzeichnung - Marking**

Unverändert - Without change

6) **Stückprüfungen - Routine verifications and tests**

Unverändert - Without change

7) **Auflagen/Bedingungen für die sichere Anwendung - Special conditions for safe use**

Unverändert - Without change

8) **Sicherheitstechnisch relevante Informationen - Information relevant for safety**

Unverändert - Without change

44809 Bochum, den 11.07.2002
 BVS-We/Mi A20020357

Deutsche Montan Technologie GmbH
Fachstelle für Sicherheit elektrischer Betriebsmittel
Bergbau-Versuchsstrecke

W. B.



Der Sachverständige
 The Testing Officer



Hinweis: Der folgende Anhang bezieht sich nur auf die Bauartänderungen, die Gegenstand dieses Nachtrags sind. Er ändert bzw. ergänzt den entsprechenden Anhang des bestehenden Prüfberichts.

Note: The following annex is related only to the changes of the equipment which are subject for this supplement. It amends or supplements the respective annex of the existing test and assessment report.

Anhang - Annex

Protokoll Report	Druckfeste Kapselung EN 50018:2000 Flameproof enclosure EN 50018:2000	(P/N1 -EN 50018)
---------------------	--	------------------

Protokoll - Report

Elektrische Betriebsmittel für explosionsgefährdete Bereiche
Electrical Apparatus for potentially explosive atmospheres
EN 50018: 2000
Druckfeste Kapselung „d“ - Flameproof enclosure „d“
Teil II: Kommentare - Part II: Comments

5.3 Gewindespalte - Threaded joints

Gewinde zwischen Thread between	Gewindelänge Thread engagement [mm]	Anzahl der Gewindegänge Threads engaged	Gewindeart und -güte Nature and quality of thread
Leitungseinführungsbohrungen Cable entry holes	> 20	> 13	M 20 x 1,5 ; mittel M 20 x 1,5; medium
Leitungseinführungsbohrungen Cable entry holes	> 20	>> 6	NPT 1/2

15.4 Prüfung von Atmungs- und Entwässerungseinrichtungen

Porengrößenbestimmung:

Bericht GB 6.3-S020503a: Sinter Ø10 mm; Porengröße 162 µm; zul. Porengröße 190 µm

Tests of breathing and draining devices

Pore size measurement:

Report GB 6.3-S020503a: sinter Ø10 mm; pore size 162 µm; permissible pore size 190 µm



IECEX Certificate of Conformity

INTERNATIONAL ELECTROTECHNICAL COMMISSION IEC Certification Scheme for Explosive Atmospheres

for rules and details of the IECEx Scheme visit www.iecex.com

Certificate No.: **IECEX TUN 04.0015X** Issue No.: **0**

Status: **Current**

Date of Issue: **2004-07-29** Page 1 of 4

Applicant: **ABB Automation Products GmbH**
Schillerstraße 72
32425 Minden
Germany

Electrical Apparatus: **Positioner type TZIDC-xxx**
Optional accessory:

Type of Protection: **Intrinsic safety; Type of protection "n"**

Marking: **Ex ia IIC T6 resp. Ex nA II T6**

*Approved for issue on behalf of the IECEx
Certification Body:*

Herbert Stürwold

Position:

Head of IECExCB

*Signature:
(for printed version)*

Date:

1. This certificate and schedule may only be reproduced in full.
2. This certificate is not transferable and remains the property of the issuing body.
3. The Status and authenticity of this certificate may be verified by visiting the [Official IECEx Website](http://www.iecex.com).

Certificate issued by:

TÜV NORD CERT GmbH & Co. KG

Am TÜV1
D-30519 Hannover
Germany





IECEx Certificate of Conformity

Certificate No.: **IECEx TUN 04.0015X**

Date of Issue: **2004-07-29**

Issue No.: **0**

Page **2** of **4**

Manufacturer: **ABB Automation Products GmbH**
Schillerstraße 72
32425 Minden
Germany

Manufacturing location(s):

ABB
Automation Products GmbH
Schillerstraße 72
32425 Minden
Germany

This certificate is issued as verification that a sample(s), representative of production, was assessed and tested and found to comply with the IEC Standard list below and that the manufacturer's quality system, relating to the Ex products covered by this certificate, was assessed and found to comply with the IECEx Quality system requirements. This certificate is granted subject to the conditions as set out in IECEx Scheme Rules, IECEx 02 and Operational Documents as amended.

STANDARDS:

The electrical apparatus and any acceptable variations to it specified in the schedule of this certificate and the identified documents, was found to comply with the following standards:

IEC 60079-0 : 2000 Edition: 3.1	Electrical apparatus for explosive gas atmospheres - Part 0: General requirements
IEC 60079-11 : 1999 Edition: 4	Electrical apparatus for explosive gas atmospheres - Part 11: Intrinsic safety 'I'
IEC 60079-15 : 2001 Edition: 2	Electrical apparatus for explosive gas atmospheres - Part 15: Type of protection 'n'

*This Certificate **does not** indicate compliance with electrical safety and performance requirements other than those expressly included in the Standards listed above.*

TEST & ASSESSMENT REPORTS:

A sample(s) of the equipment listed has successfully met the examination and test requirements as recorded in

IECEx ATR:
DE/TUN/04/551542

File Reference:
04 YEX 551542



IECEx Certificate of Conformity

Certificate No.: **IECEx TUN 04.0015X**

Date of Issue: **2004-07-29**

Issue No.: **0**

Page **3** of **4**

Schedule

EQUIPMENT:

Equipment and systems covered by this certificate are as follows:

The Positioner type TZIDC-xxx is used for the control resp. closed loop control of pneumatic driven valves. The Positioner type TZIDC resp. TZIDC-200 transfers the reference value by means of an impressed signal current of 4...20 mA.

The Positioner type TZIDC-110, TZIDC-210, TZIDC-120 resp. TZIDC-220 transfers the reference value via a field bus signal.

An integrated distance sensor measures the current position of the valve drive. An integrated current/pressure transformer (I/P) is used for the pneumatic auxiliary power.

The permissible ambient temperature range in dependence on the type, the type of protection and the Temperature Classes has to be taken from the following table:

Type and marking	TZIDC resp. TZIDC-200 Ex ib IIC	TZIDC-110/-210/ -120/-220 Ex ia IIC	TZIDC resp. TZIDC- 110/-120 Ex nA II
Temperature Class	Ambient temperature range		
T4	-40°C to +85°C	-40°C to +85°C	-40°C to +85°C
T5	-40°C to +50°C	-40°C to +55°C	-40°C to +65°C
T6	-40°C to +35°C	-40°C to +40°C	-40°C to +50°C

Additional technical data see EQUIPMENT (continued)

CONDITIONS OF CERTIFICATION: YES as shown below:

Special condition for safe use of intrinsically safe Positioners:

The operation of the local communication interface (LKS) and of the programming interface (X5) is only allowed outside of the hazardous explosive area.

Special conditions for safe use of Positioners marked Ex nA II T6:

Only devices which are suitable for the operation in explosion hazardous areas declared as zone 2 and the conditions available at the place of operation are allowed to be connected to circuits in the zone 2.

The connecting and disconnecting as well as the switching of circuits under voltage are only permitted during installation, for maintenance or repair purposes.

Note: The temporal coincidence of explosion hazardous atmosphere and installation, maintenance resp. repair purposes is assessed as improbably.

For the circuit "Mechanical digital feedback" measures have to be taken outside the device that the rated voltage is exceeded not more than 40% by transient disturbances.

Only non combustible gases are allowed to be used as pneumatic auxiliary energy.

Only suitable cable entries which meet the requirements of IEC 60079-15 are allowed to be used.



IECEx Certificate of Conformity

Certificate No.: **IECEx TUN 04.0015X**

Date of Issue: **2004-07-29**

Issue No.: **0**

Page **4** of **4**

Additional information:

Electrical data for type TZIDC resp. TZIDC-200 with marking Ex ib IIC T6	
Signal circuit (terminals 11(+), 12(-))	in type of protection "Intrinsic Safety" Ex ib IIC only for the connection to a certified intrinsically safe circuit with the following maximum values: $U_i = 30 \text{ V}$ $I_i = 320 \text{ mA}$ $P_i = 1.1 \text{ W}$ effective internal capacitance: $C_i = 6.6 \text{ nF}$ The effective internal inductance is negligibly small.
Switch input (terminals 81(+), 82(-))	in type of protection "Intrinsic Safety" Ex ib IIC only for the connection to a certified intrinsically safe circuit with the following maximum values: $U_i = 30 \text{ V}$ effective internal capacitance: $C_i = 3.7 \text{ nF}$ The effective internal inductance is negligibly small.
Switch output (terminals 83(+), 84(-))	in type of protection "Intrinsic Safety" Ex ib IIC only for the connection to a certified intrinsically safe circuit with the following maximum values: $U_i = 30 \text{ V}$ $P_i = 500 \text{ mW}$ effective internal capacitance: $C_i = 3.7 \text{ nF}$ The effective internal inductance is negligibly small.
Local interface for communication (LKS)	For the connection to a programmer outside of the explosive hazardous area.
Optionally the following modules are allowed to be used:	
Mechanical digital feedback (terminals Limit1 +51, -52 resp. Limit2 +41, -42)	in type of protection "Intrinsic Safety" Ex ib IIC Maximum values see IEC Certificate No. (proximity switches of the company Pepperl + Fuchs GmbH)
Digital feedback (terminals +51, -52 resp. +41, -42)	in type of protection "Intrinsic Safety" Ex ib IIC only for the connection to a certified intrinsically safe circuit with the following maximum values: $U_i = 30 \text{ V}$ $P_i = 500 \text{ mW}$ effective internal capacitance: $C_i = 3.7 \text{ nF}$ The effective internal inductance is negligibly small.
Analogue feedback (terminals +31, -32)	in type of protection "Intrinsic Safety" Ex ib IIC only for the connection to a certified intrinsically safe circuit with the following maximum values: $U_i = 30 \text{ V}$ $P_i = 1.1 \text{ W}$ effective internal capacitance: $C_i = 6.6 \text{ nF}$ The effective internal inductance is negligibly small.
Shutdown-switch-input (terminals +51, -52 resp. +85, -86)	in type of protection "Intrinsic Safety" Ex ib IIC only for the connection to a certified intrinsically safe circuit with the following maximum values: $U_i = 30 \text{ V}$ effective internal capacitance: $C_i = 3.7 \text{ nF}$ The effective internal inductance is negligibly small.
The intrinsically safe circuits themselves are safe galvanically separated up to a voltage of 60 V. The "Local interface for communication (LKS)" is connected with the signal circuit.	

Electrical data for type TZIDC-110, TZIDC-210, TZIDC-120 resp. TZIDC-220 with marking Ex ia IIC T6			
Input circuit (terminals +11, -12 resp. +, -)		in type of protection "Intrinsic Safety" Ex ia IIC resp. Ex ib IIC only for the connection to a certified intrinsically safe circuit (e.g. FISCO power supply) with the maximum values according to the following table:	
	FISCO power supply ia/ib for group IIB/IIC	FISCO power supply ia/ib for group IIB/IIC	Barrier or power supply ia/ib for group IIB/IIC
Voltage	17.5 V	17.5 V	24 V
Current	380 mA	360 mA	250 mA
Power	5.32 W	2.52 W	1.2 W
Characteristic line	rectangular	Trapezoidal	linear
Local interface for communication (LKS) and programming interface (X5)		For the connection to a programmer resp. a PC outside of the explosive hazardous area.	
Optionally the following modules are allowed to be used:			
Shutdown-switch-input (terminals +51, -52 resp. +85, -86)		in type of protection "Intrinsic Safety" Ex ia IIC resp. Ex ib IIC only for the connection to a certified intrinsically safe circuit with the following maximum values: $U_i = 30 \text{ V}$ effective internal capacitance: $C_i = 3.7 \text{ nF}$ The effective internal inductance is negligibly small.	
Mechanical digital feedback (terminals Limit1 +51, -52 resp. Limit2 +41, -42)		in type of protection "Intrinsic Safety" Ex ib IIC Maximum values see IEC Certificate No. (proximity switches of the company Pepperl + Fuchs GmbH)	
The intrinsically safe circuits themselves are safe galvanically separated up to a voltage of 60 V. The "Local interface for communication (LKS) and programming interface (X5)" is connected with the signal circuit.			

Electrical data for type TZIDC, TZIDC-110 resp. TZIDC-120 with marking Ex nA II T6	
Type TZIDC resp. TZIDC-200	
Signal circuit (terminals 11(+), 12(-))	U = 8.7 VDC; 4...20 mA, max. 21.5 mA
Switch input (terminals 81(+), 82(-))	U = 12...24 VDC; 4 mA
Switch output (terminals 83(+), 84(-))	U = 11 VDC
Optionally the following modules are allowed to be used with type TZIDC:	
Digital feedback (terminals +51, -52 resp. +41, -42))	U = 5...11 VDC
Analogue feedback (terminals +31, -32)	U = 10...30 VDC; 4...20 mA, max. 21.5 mA
Type TZIDC-110	
Input circuit (terminals +11, -12)	U = 9...32 VDC; 10.5 mA
Type TZIDC-120	
Input circuit (terminals +11, -12)	U = 9...32 VDC; 11.5 mA
Additionally the following modules are allowed to be used with all types marked Ex nA II T6:	
Shutdown-switch-input (terminals +51, -52 resp. +85, -86)	U = 20...30 VDC
Mechanical digital feedback (terminals Limit1 +51, -52 resp. Limit2 +41, -42)	U = 5...11 VDC



EC-TYPE-EXAMINATION CERTIFICATE

(Translation)

- (2) Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres - **Directive 94/9/EC**
- (3) EC-type-examination Certificate Number:



PTB 00 ATEX 2049 X

- (4) Equipment: SN-sensors, types NJ... and SJ...
- (5) Manufacturer: Pepperl + Fuchs GmbH
- (6) Address: D-68307 Mannheim
- (7) This equipment and any acceptable variation thereto are specified in the schedule to this certificate and the documents therein referred to.
- (8) The Physikalisch-Technische Bundesanstalt, notified body No. 0102 in accordance with Article 9 of the Council Directive 94/9/EC of 23 March 1994, certifies that this equipment has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres, given in Annex II to the Directive.

The examination and test results are recorded in the confidential report PTB Ex 00-29268.

- (9) Compliance with the Essential Health and Safety Requirements has been assured by compliance with:
EN 50014:1997 **EN 50020:1994**
- (10) If the sign "X" is placed after the certificate number, it indicates that the equipment is subject to special conditions for safe use specified in the schedule to this certificate.
- (11) This EC-type-examination Certificate relates only to the design and construction of the specified equipment in accordance with Directive 94/9/EC. Further requirements of this Directive apply to the manufacture and supply of this equipment.
- (12) The marking of the equipment shall include the following:

II 2 G EEx ia IIC T6

Zertifizierungsstelle Explosionsschutz
By order:

Braunschweig, October 05, 2000

Dr.-Ing. U. Johannsmeyer
Regierungsdirektor



sheet 1/4

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.

Physikalisch-Technische Bundesanstalt • Bundesallee 100 • D-38116 Braunschweig

SCHEDULE

(13)

(14) **EC-TYPE-EXAMINATION CERTIFICATE PTB 00 ATEX 2049 X**

(15) Description of equipment

The SN-sensors, types NJ... and SJ... are used to convert displacements into electrical signals.

The SN-sensors, types NJ... and SJ... may be operated with intrinsically safe circuits certified for categories and explosion groups [EEx ia] IIC or IIB resp. [EEx ib] IIC or IIB. The category as well as the explosion group of the SN-sensors depends on the connected supplying intrinsically safe circuit.

Electrical data

Evaluation and

supply circuit..... type of protection Intrinsic Safety EEx ia IIC/IIB
resp. EEx ib IIC/IIB

only for connection to certified intrinsically safe circuits
maximum values:

type 1	type 2	type 3	type 4
$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$
$I_i = 25 \text{ mA}$	$I_i = 25 \text{ mA}$	$I_i = 52 \text{ mA}$	$I_i = 76 \text{ mA}$
$P_i = 34 \text{ mW}$	$P_i = 64 \text{ mW}$	$P_i = 169 \text{ mW}$	$P_i = 242 \text{ mW}$

The assignment of the type of the connected circuit to the maximum permissible ambient temperature and the temperature class as well as the effective internal reactances for the individual types of SN-sensors is shown in the following table:

sheet 2/4

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.

Physikalisch-Technische Bundesanstalt • Bundesallee 100 • D-38116 Braunschweig

types	C _i [nF]	L _i [µH]	type 1			type 2			type 3			type 4		
			maximum permissible ambient temperature in °C for application in temperature class											
			T6	T5	T4-T1	T6	T5	T4-T1	T6	T5	T4-T1	T6	T5	T4-T1
NJ 2-11-SN...	50	150	73	88	100	66	81	100	45	60	89	30	45	74
NJ 2-11-SN-G...	50	150	76	91	100	73	88	100	62	77	81	54	63	63
NJ 2-12GK-SN...	50	150	73	88	100	69	84	100	51	66	80	39	54	61
NJ 3-18GK-S1N...	70	200	73	88	100	69	84	100	51	66	80	39	54	61
NJ 4-12GK-SN...	70	150	73	88	100	69	84	100	51	66	80	39	54	61
NJ 5-18GK-SN...	120	200	73	88	100	69	84	100	51	66	80	39	54	61
NJ 5-30GK-S1N...	100	200	73	88	100	69	84	100	51	66	80	39	54	61
NJ 6-22-SN...	110	150	73	88	100	69	84	100	51	66	80	39	54	61
NJ 6-22-SN-G...	110	150	76	91	100	73	88	100	62	77	81	54	63	63
NJ 6S1+U.+N...	180	150	73	88	100	69	84	100	51	66	80	39	54	61
NJ 8-18GK-SN...	120	200	73	88	100	69	84	100	51	66	80	39	54	61
NJ 10-30GK-SN...	120	150	73	88	100	69	84	100	51	66	80	39	54	61
NJ 15-30GK-SN...	120	180	73	88	100	69	84	100	51	66	80	39	54	61
NJ 15S-U.-N...	180	150	73	88	100	66	81	100	45	60	89	30	45	74
NJ 20S-U.-N...	200	150	73	88	100	66	81	100	45	60	89	30	45	74
NJ 40-FP-SN...	370	300	73	88	100	66	81	100	45	60	89	30	45	74
SJ 2-SN...	30	100	73	88	100	66	81	100	45	60	78	30	45	57
SJ 2-S1N...	30	100	73	88	100	66	81	100	45	60	78	30	45	57
SJ 3,5-S1N...	30	100	73	88	100	66	81	100	45	60	89	30	45	74
SJ 3,5-SN...	30	100	73	88	100	66	81	100	45	60	89	30	45	74

(16) Test report PTB Ex 00-29268

(17) Special conditions for safe use

1. For the application within a temperature range of -60 °C to -20 °C the SN-sensors, types NJ... and SJ... must be protected against damage due to impact by mounting into an additional housing.
2. The connection facilities of the SN-sensors, types NJ... and SJ... shall be installed as such that at least a degree of protection of IP20 according to IEC-publication 60529:1989 is met.
3. The assignment of the type of the connected circuit to the maximum permissible ambient temperature and the temperature class as well as the effective internal reactances for the individual types of SN-sensors is shown in the table given under item (15) of this EC-type-examination certificate.

sheet 3/4

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.

Physikalisch-Technische Bundesanstalt • Bundesallee 100 • D-38116 Braunschweig

4. With the application in group IIC inadmissible electrostatic charge of the plastic housing has to be avoided for following types of SN-sensors (warning label on the device):

NJ 40-FP-SN...

5. Inadmissible electrostatic charge of parts of the metal housing has to be avoided for the following types of SN-sensors. Dangerous electrostatic charges of parts of the metal housing can be avoided by grounding of these parts whereas very small parts of the metal housing (e.g. screws) don't need to be grounded:

NJ 2-11-SN-G...

NJ 6-22-SN-G...

NJ 6S1+U3+N...

NJ 6S1+U4+N...

NJ 15S+U3+N...

NJ 15S+U4+N...

NJ 20S+U3+N...

NJ 20S+U4+N...

NJ 40-FP-SN-P3...

NJ 40-FP-SN-P4...

(18) Essential health and safety requirements

Met by the standards mentioned above

Zertifizierungsstelle Explosionsschutz

By order:


Dr.-Ing. U. Johannsmeyer
Regierungsdirektor



Braunschweig, October 05, 2000

sheet 4/4


EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.

Physikalisch-Technische Bundesanstalt • Bundesallee 100 • D-38116 Braunschweig

Appendix A: Configuration overview

Par.	Display	Function	Parameter setting	Unit	Factory setting
P1_	STANDARD				
P1.0	ACTUATOR	Actuator type	LINEAR, ROTARY	-	LINEAR
P1.1	AUTO_ADJ	Autoadjustment	Action	-	-
P1.2	TOL_BAND	Tolerance band	0.3...10.0	%	0.8
P1.3	DEADBAND	Deadband	0.1...5.0	%	0.5
P1.4	TEST	Test	Action	-	-
P1.5	<i>not used</i>				
P1.6	EXIT	Return to operat. level	Action	-	-
P2_	SETPOINT				
P2.0	<i>not used</i>	-			
P2.1	<i>not used</i>	-			
P2.2	CHARACT	Characteristic curve	LINEAR, EP 1:25, 1:50,25:1, 50:1, USERDEF,	-	LINEAR
P2.3	ACTION	Output action	DIRECT, REVERSE	-	DIRECT
P2.4	SHUT_CLS	Shut close value 0%	OFF, 0.1...45.0	%	OFF
P2.5	RAMP_UP	Setpoint ramp, up	OFF, 0.1...999.9	sec	OFF
P2.6	RAMP_DN	Setpoint ramp, down	OFF, 0.1...999.9	sec	OFF
P2.7	SHUT_OPN	Shut open value 100 %	OFF, 80.0...100.0	%	OFF
P2.8	EXIT	Return to operat. level	Action	-	-
P3_	ACTUATOR				
P3.0	MIN_RGE	Min. of operat. range	0.0...100.0	%	0.0
P3.1	MAX_RGE	Max. of operat. range	0.0...100.0	%	100.0
P3.2	ZERO_POS	Zero position	CLOCKWISE, CTCLOCKWISE	-	CTCLOCKWISE
P3.3	EXIT	Return to operat. level	Action	-	-
P4_ and P5_		<i>not used</i>			

Par.	Display	Function	Parameter setting	Unit	Factory setting
P6._	MAN_ADJ				
P6.0	MIN_VR	Min. valve range	0.0...100.0	%	0.0
P6.1	MAX_VR	Max. valve range	0.0...100.0	%	100.0
P6.2	ACTUATOR	Actuator type	LINEAR, ROTARY	-	LINEAR
P6.3	SPRNG_Y2	Spring action (Y2)	CLOCKWISE, CTCLOCKWISE	-	CTCLOCKWISE
P6.4	ADJ_MODE	Autoadjust mode	FULL, STROKE, CTRL_PAR, ZERO_POS, LOCKED	-	FULL
P6.5	EXIT	Return to operat. level	Action	-	-
P7._	CTRL_PAR				
P7.0	KP UP	KP value, up	1.0...100.0	-	1.0
P7.1	KP DN	KP value, down	1.0...100.0	-	1.0
P7.2	TV UP	TV value, up	0...1000	msec	100
P7.3	TV DN	TV value, down	0...1000	msec	100
P7.4	GOPLS UP	Go pulse, up	0...200	msec	0
P7.5	GOPLS DN	Go pulse, down	0...200	msec	0
P7.6	Y-OFS UP	Y offset, up	Y-Min...100.0	%	40.0
P7.7	Y-OFS DN	Y offset, down	Y-Min...100.0	%	40.0
P7.8		<i>not used</i>	<i>not used</i>	-	-
P7.9	TOL_BAND	Tolerance band	0.3...10.00	%	0.8
P7.10	TEST	Test	Action	-	-
P7.11	EXIT	Return to operat. level	Action	-	-
P8._, P9._, P10._		<i>not used</i>	<i>not used</i>		
P11._	FS / IP				
P11.0	FAIL_POS	Safe position	ACTIVE, INACTIVE	-	INACTIVE
P11.1	FACT_SET	Factory setting	Action	-	-
P11.2	IP_TYP	I/P module type	NO_F_POS, F_SAFE_1, F_SAFE_2, F_FREEZE1, F_FREEZE_2	-	NO_F_POS
P11.3	EXIT	Return to operat. level	Action	-	-

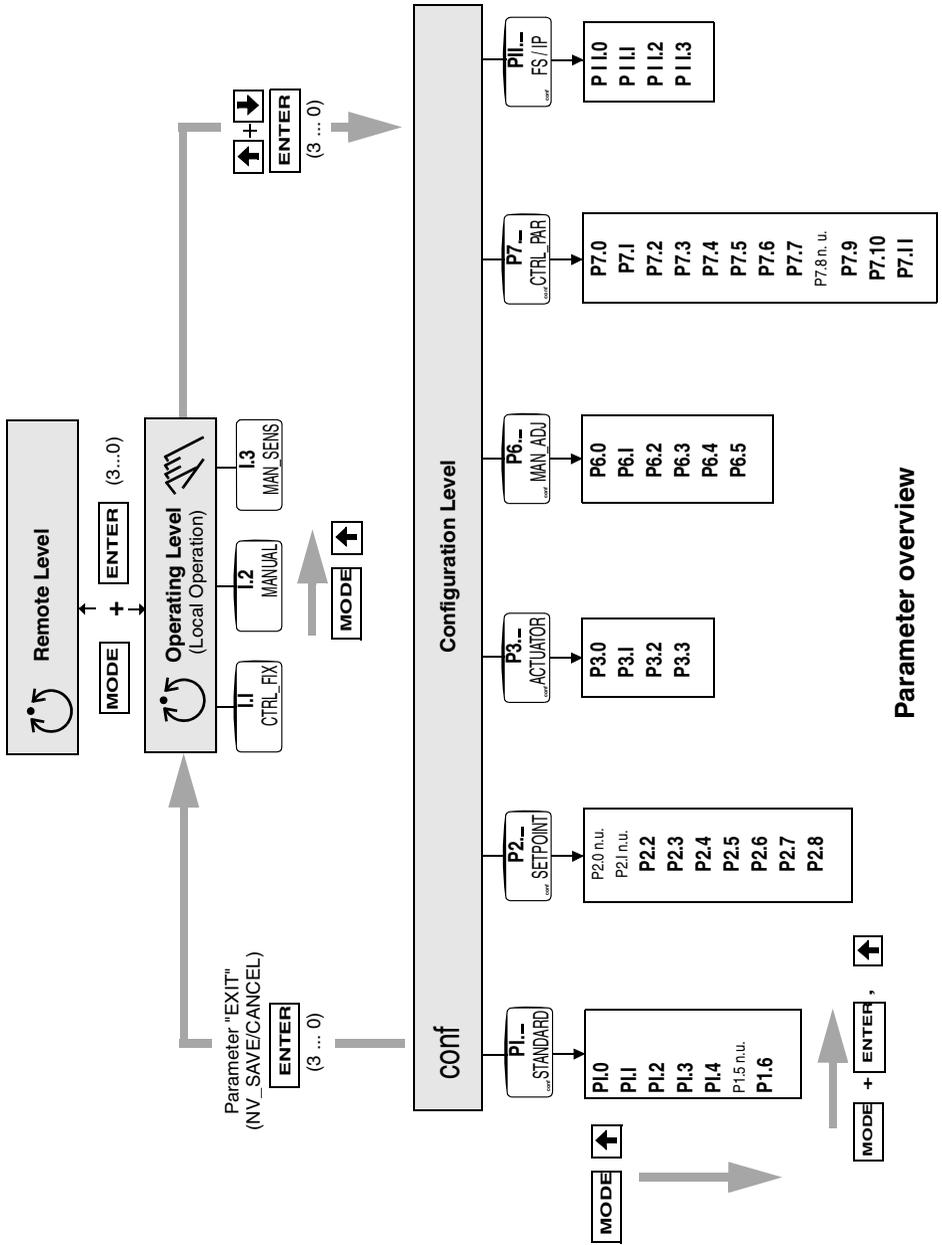



VALVE ACCESSORIES & CONTROLS, INC.
200 Jade Park
Chelsea, AL 35043
TEL: 205-678-0507 • FAX: 205-678-0510
vacaccessories.com



Valve Accessories & Controls, Inc.
12942 Bedford Falls Dr.
Cypress, TX 77429
TEL: 713-253-7781 • FAX: 281-256-9399
randye@vacaccessories.com