



Converting from V100P to V100E

1. Remove the front cover and indicator.
(see page 12 in V100 Brochure)
2. Loosen the screws(1) and remove the cover(2).
3. Unscrew the protective plug from the I_E-connection(8).

Please Note!
Check the seals(3 & 4).
Replace if they are damaged.

4. Insert the connection card(5) and the I/P-converter(6) through the square hole in the housing.
5. Secure the I/P-converter with the screws(7).
6. Install the connection card in its seat and secure with the locking screw(10).
7. Plug the port(9) marked I_P.
Threading requirements G 1/4" or 1/4" NPT is indicated by the markings on the housing.
8. Connect the control signal (see page 10).

