



Installing IP converter

Remove the front cover and indicator.(see page 15 in V200 IOM Manual)

1. Loosen the two screws that secure the pneumatic sealing plate(1) and remove the plate.
2. Make sure the two O-rings(2) are still in the positioner housing.
3. Install the IP converter(3) and tighten the screws(4).
4. Install the 1/4" plug(5) in the port marked I.

