


V200 Third Party Switch Mounting Instructions

Always order the long Namur shaft with your third party switch for use with this kit-Westlock illustrated-other switches with Westlock mounting will mount just as well. We also have mounting for Stonel EX Switches.




1. Mount and calibrate the V200E-EX positioner. Calibrate only the positioner. The EX Ip has been factory calibrated.

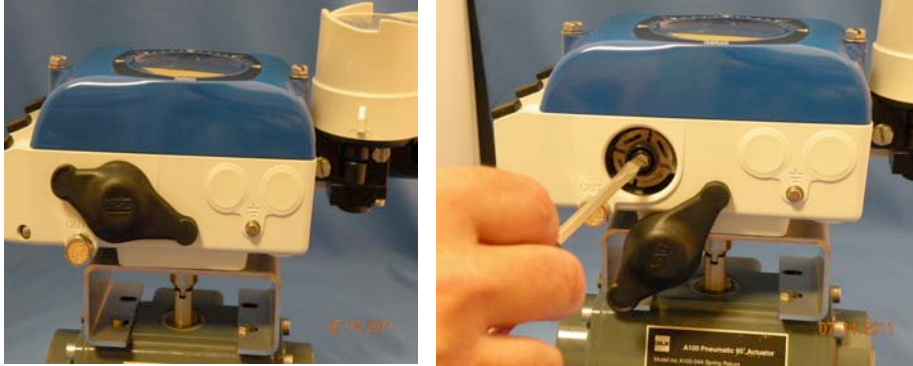

2. Remove the positioner cover, arrow, and socket head bolt.

3. Place the gasket and mounting plate on cover.

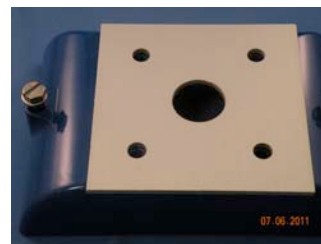

4. Place the o-ring on the shaft hub of the switch.




5. Attach the Namur shaft coupling to the positioner drive shaft using the M6 set screw.



6. Using the 4 -5/16" socket screws mount the switch to the positioner cover.



8. Place the cover with switch on the positioner and tighten the two positioner cover screws.

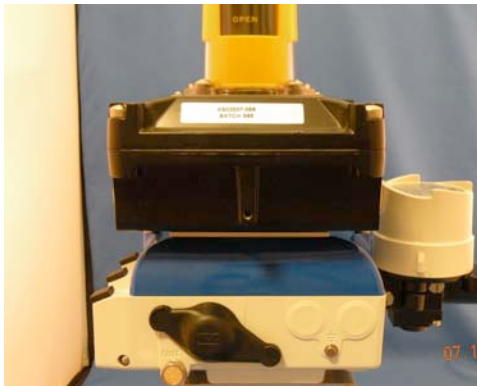

Final Assembly

9. A fine-tuning of the positioner may be needed after mounting the EX Switch. The positioner zero and span can be accessed without removing the cover and switch package, behind the rubber grommet next to the exhaust port.

Note: There is no wiring between the positioner and the EX switch. The V200 EX has a separate wiring terminal on the external Ip.-4/20 mA-24 VDC. The switch will be wired separately-see Third Party Switch wire and power requirements.



Valve Accessories & Controls, Inc.
www.vacaccessories.com
205-678-0507