



All Parts for the V200 FB-M-mA

Remove the cover, Indicator Arrow, and Slotted Indicator Screw



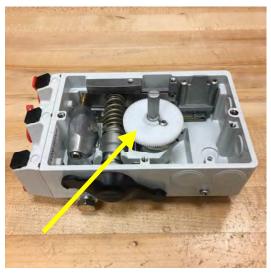

Place the large gear wheel on top of the cam nut with the hub facing up. Tighten the indicator screw to secure gear wheel

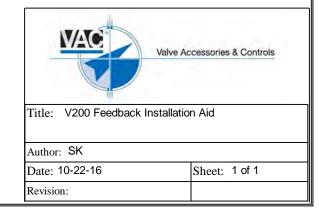

Tighten the pot. assembly into the positoner body and align the gear wheels. Make sure that the spring wire is located to the right of the switch plate screw hub as shown






Install the transmitter

Connect the pot. connector to the transmitter.

NOTE:

- A) Black or Blue wire on the LEFT is for counter clockwise operation Black or Blue wire on the RIGHT is for clockwise operation
- B) Jumper disengaged for 70-115 deg. rot. Jumper engaged for 25-70 deg.

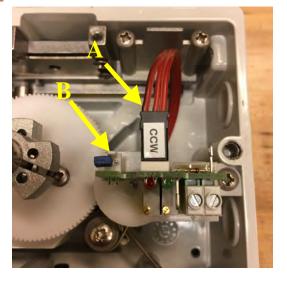



For switch mounting remove the indicator screw and add the switch cams.

Secure the switch plate to the positoner with the three screws shown





Set the switch cam with a screw driver. Cams are friction fit for easy adjustment.